

FoxSec WEB management manual

2025



1.FoxSec WEB Management

- 1. Declaration (Page 4)
- 2. Important Safety Information (Page 4)

2.FoxSec WEB Structure

1. Management Structure (Page 5)

3.Login & User Management

- 1. Login Process (Page 6-7)
- 2. Setting up WEB order(9)

4.Administration

- 1. Role Management (Page 20-25)
- 2. Companies (Page 10-13)
- 3. Departments (Page 14-16)
- 4. Titles (Page 17-19)
- 5. Time Zones (Page 26-27)
- 6. Permissions (Page 28-35)

5.User & Card Management

- 1. Adding Users (Page 36-44)
- 2. Adding Cards (Page 60-65)
- Deactivating/Activating Cards (Page 62-64, 77-79)

Contents



6. Log & Location Management

- 1. Log Details (Page 86-87)
- 2. Location Settings (Page 89-94)

7. Time & Attendance (T&A)

1. T&A Reports (Page 95-103)

8. Video Management

- 1. Live Video (Page 107-114)
- 2. Assigning Cameras (Page 110-114)

9. Visitor Management

- 1. Adding Visitors (Page 119-129)
- 2. Visitor Cards & Permissions (Page 124-129)

10. AQs

1. Common Questions (Page 104-106)

11. Safety & Warranty

- 1. Safety Precautions (Page 133)
- 2. Limited Warranty (Page 134)

1. FoxSec WEB[®] management

Full mamual for managing FoxSec WEB management

Declaration

Our company can not hold responsible for any kind of mistakes in this manual. Hardmeier OÜ is the owner of all right, title and interest in the FoxSec brand and logos. No person or entity may reproduce or use (or authorize the reproduction or use of) the Hardmeier brands and logos in any manner other than expressly authorized by Hardmeier.


Unauthorized use of Hardmeier brands and logos is strictly prohibited.

Important!

Read these instructions before use. Pay special attention to the safety information.

These devices must be installed, maintenance and repaired by authorized personnel only. Any purpose it is not intended for may cause fatal failure to the system or even but in danger personnel nearby.

FoxSec WEB management structure

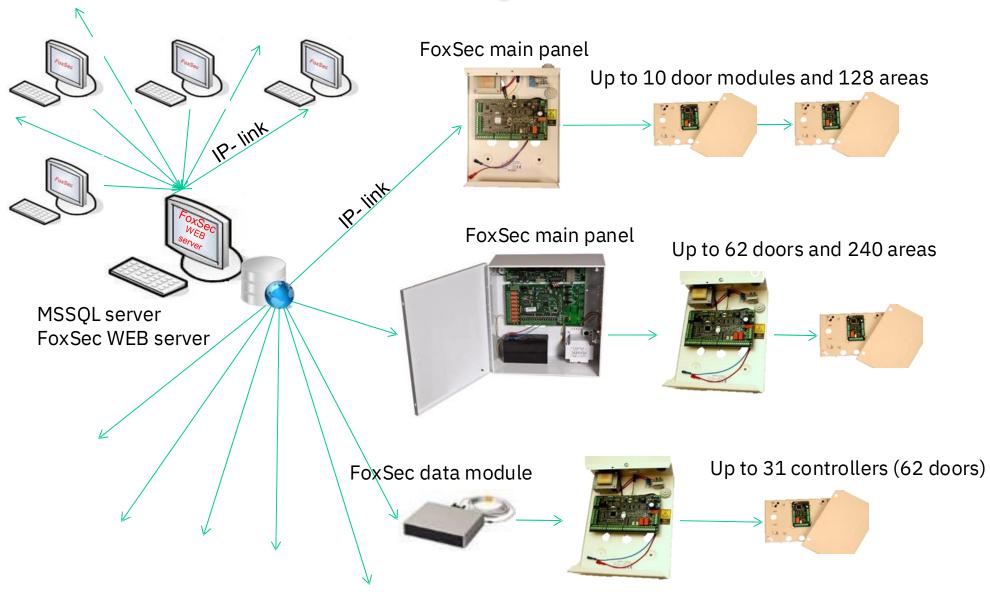

Up to x amount of main panels



Steps for FoxSec WEB Management


- 1) First enter the FoxSec WEB management URI into the web browser.
- 2) Enter Username and password for it. By default SA (system administrator) username is "kasutaja" and password is "1Kasutaja"
- 3) By default Builidin user isa SA (system administrator). You can create another SA user after login.




Login

USERNAME AND PASSWORDS ARE CASE SENSITIVE

Open a web browser and enter the FoxSec WEB address in the address bar To create new users, you must first log in as the main administrator.

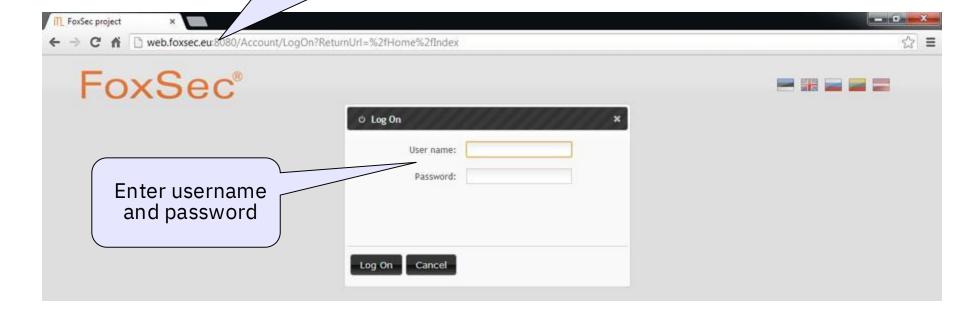


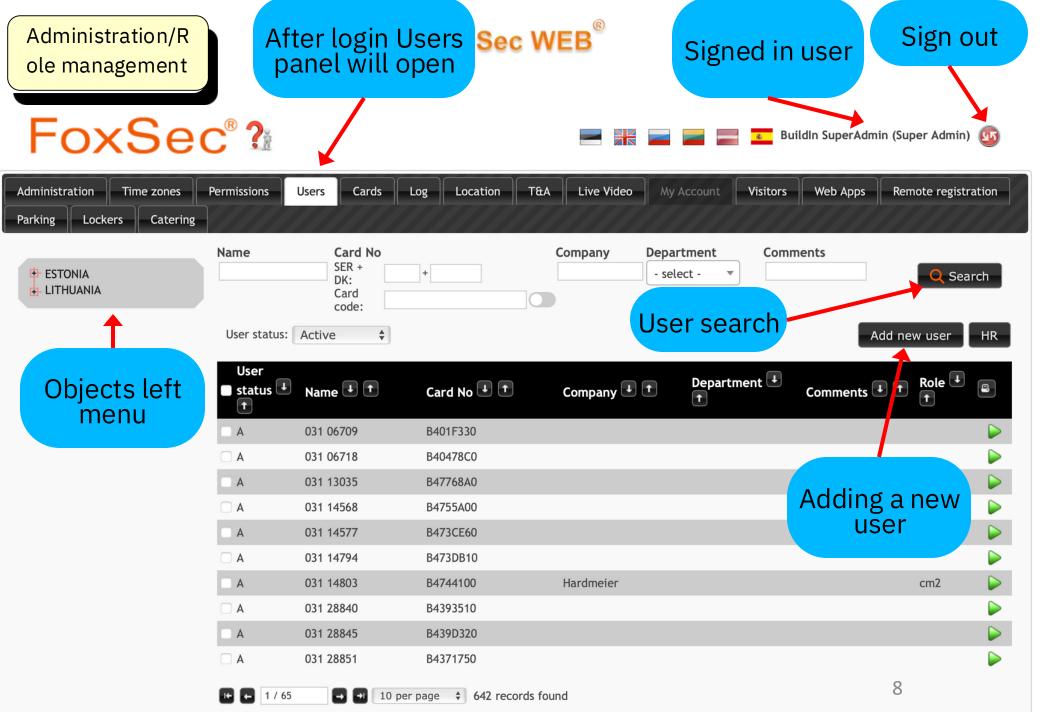



After login you will redirect to home page by default, tab you will get is "Users" tab

Before creating a User you have to create these important tabs, then you can create a User

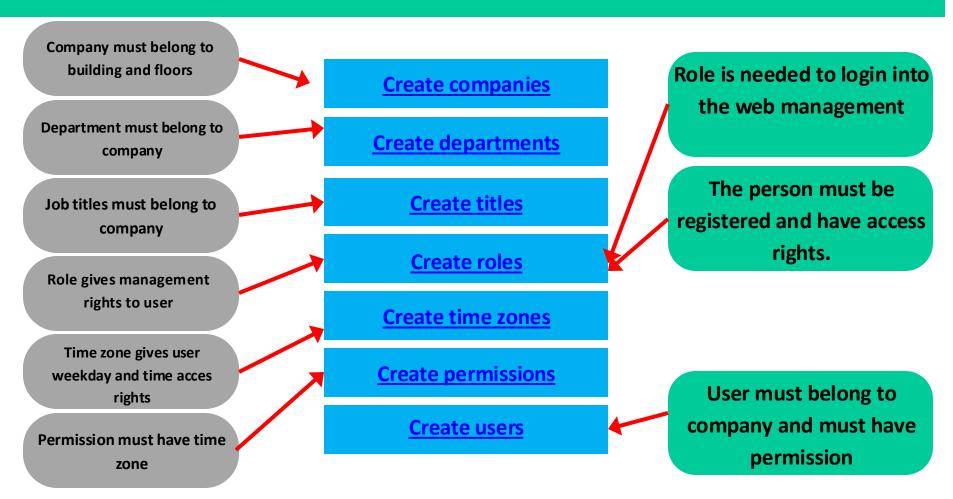

Administration/Companies Tab/Add new Company

Note- Country, Location, Building, Floors are all added from FOXSECCONF application

To add a new company we have to click on add new company button

Then we have to add a company name in the company title box


Then we have to select building from the dropdown and add floors of that buildin for the company


Users, Cards, Log tab companies tab: SA can select multiple companies from company list and company manager of entered company can see Users, Cards and Log Tab details of selected companies

Save company

After that if we clik on edit button we will getthe same window like add company, we can change details and add details here



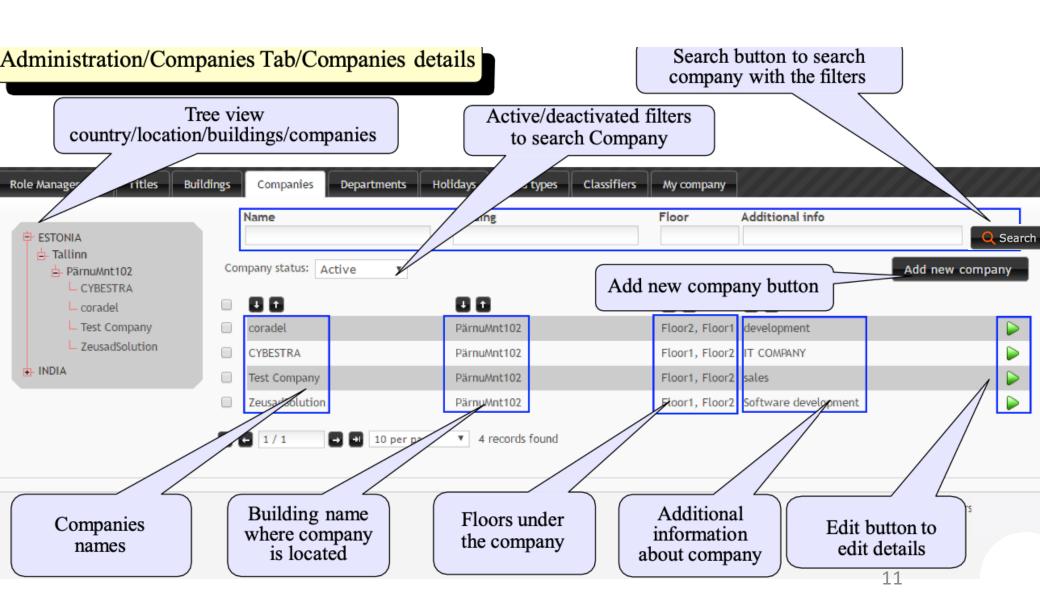

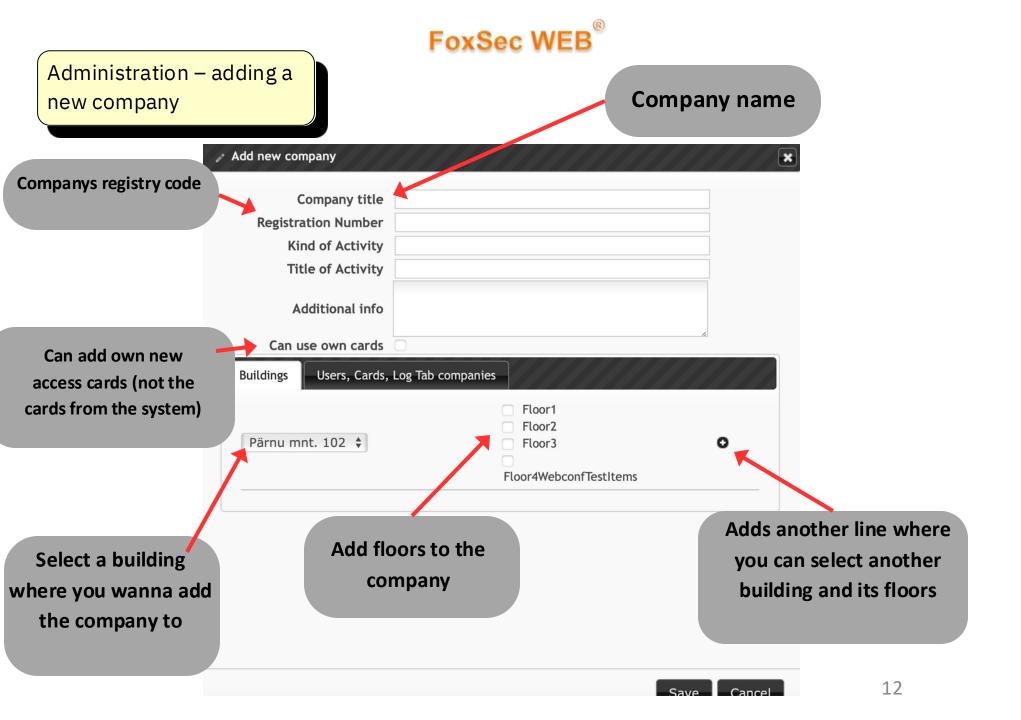



Select companies from list for which company manager of entered company can see User, cards and Log tab details.

| Company titl | e | |
|----------------------|------------------------|--|
| Registration Number | er | |
| Kind of Activit | :y | |
| Title of Activit | :у | |
| Additional inf | ·o | |
| Can use own card | ds | |
| Buildings Users, Car | rds, Log Tab companies | |
| 1234 | 567 | |
| 3 auk | kstas | |
| abc | | |
| ADI | | |
| ADI | | |
| COM | P_LT | |
| D_tes | st | |
| Demo | o Company1 | |
| Demo | o CompanyA | |
| Demo | o CompanyB | |
| DOMI | l | |
| Fr D | Kroutzwaldi 56 | |

FoxSec WEB®

Adding a new Department

To add new department we have to click on add new department button.

- Then we have to select company to assign department.
- 2 Add numbers of departments that belongs to company.
- **Proof:** Enter name for the department.
- Select manger for the department and assign validity period to that manger.
- ② After that if we click on edit button we will get same window like add Department, in this window we can change details and add details.


Department manager:


Manager type must be set in users role section. User role must be created in role management Role type-DM(department manger)

FoxSec WEB®

Administration/ Department tab

Departments owned by the company. Each company can have separate departments with separate numbering.

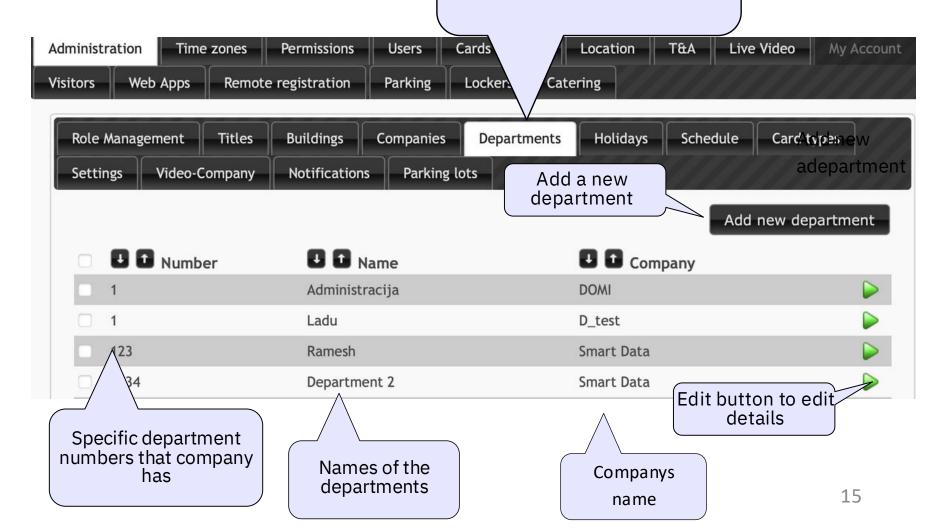

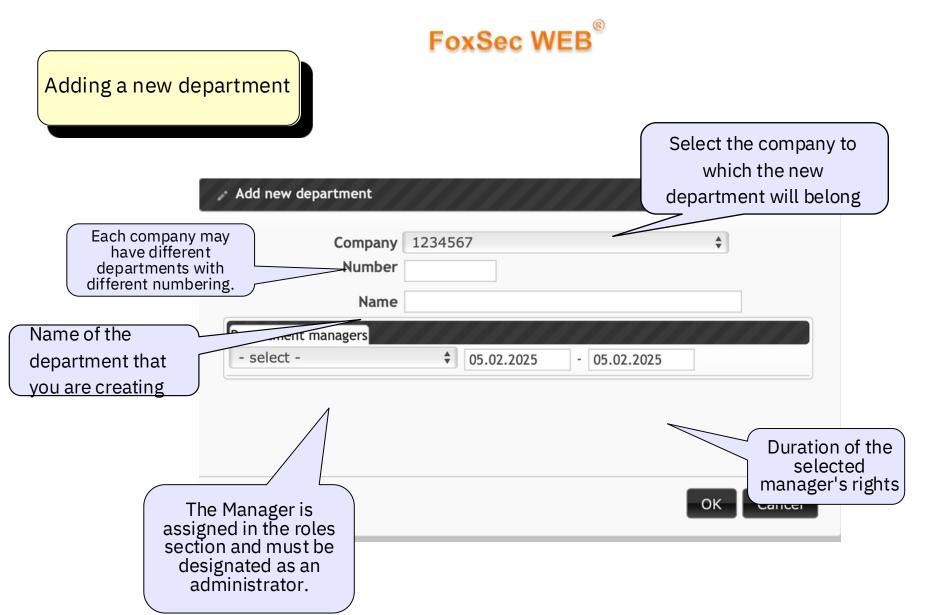

Administration /Add new Title

To add a new title we have to click on add new title button.

Then we have to select company to assign title.

Enter title for the company.


Enter name for the department.


Add description for the title its optional



Administration /Title tab

NB! You can add, edit and delete titles at your own discretion.

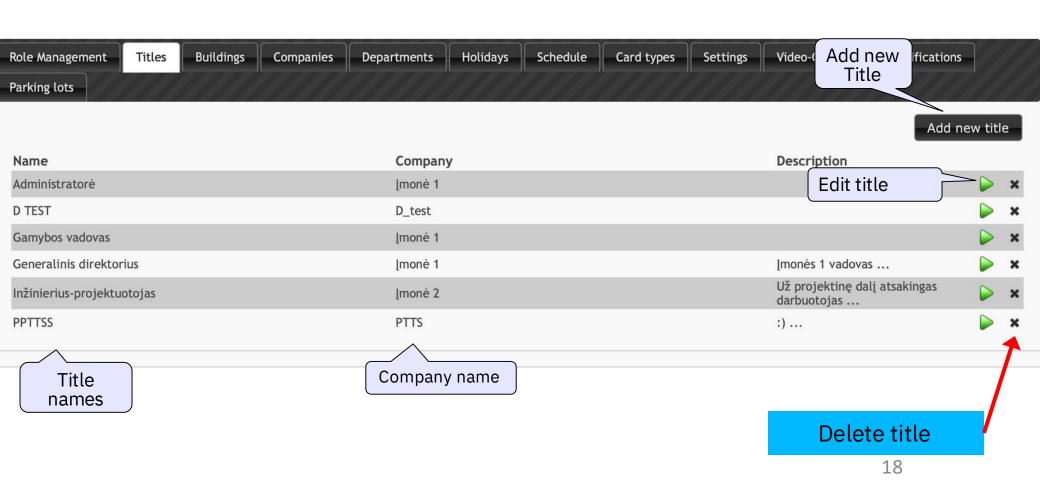

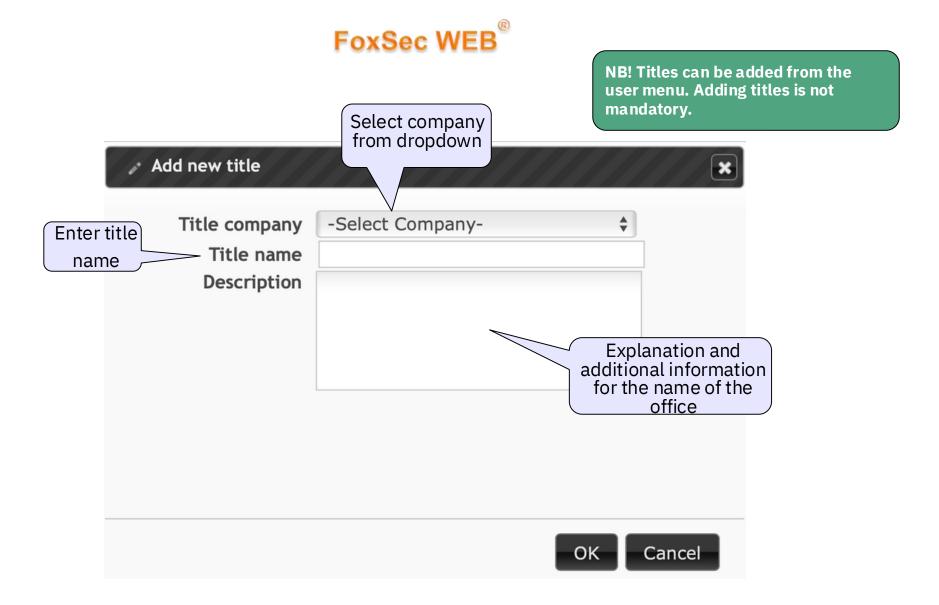



Now we add a NEW ROLE


To create a new role we have to click on "Add new role"

Then we hace to fill all the details.


We have to assign role type and building that is important to the User.

Then save the form.

Note - we have to edit the form after saving to assign permission access. You can not directly assign the permission access

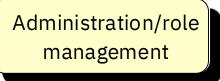


FoxSec WEB®

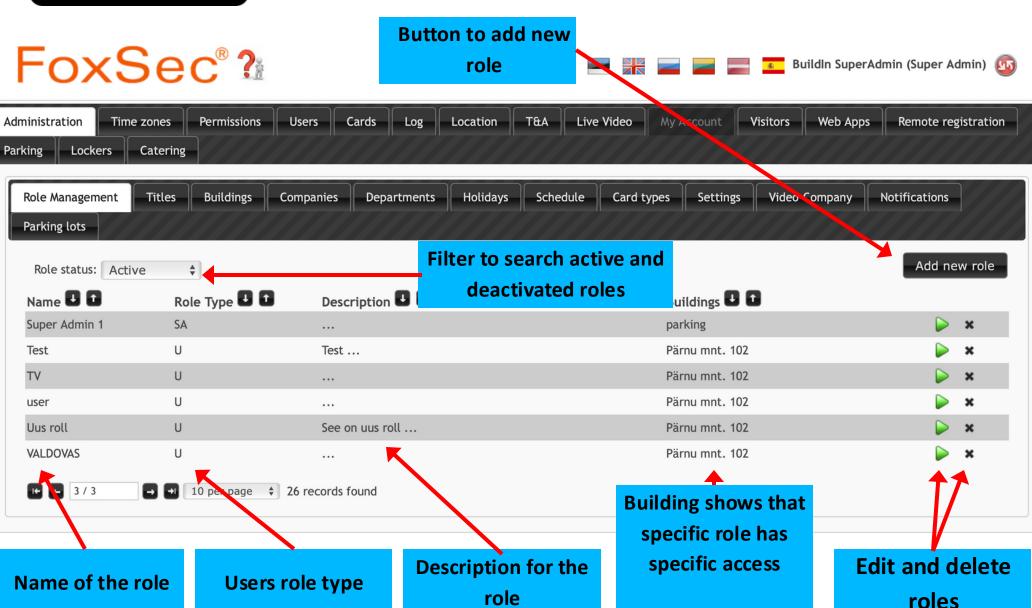

FoxSec WEB



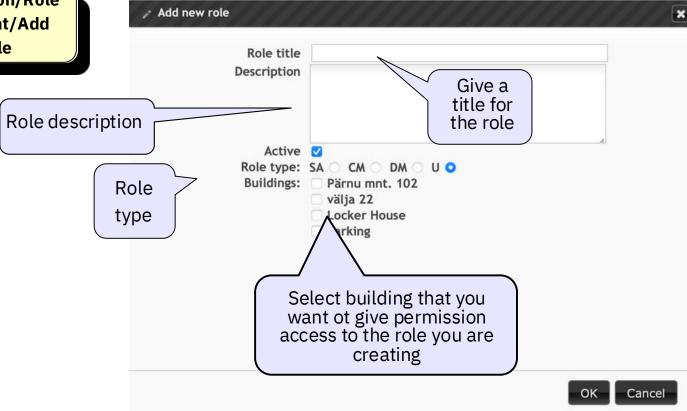

NB! First, you need to create the Super Administrator (SA) role and assign it rights immediately. Any subsequent changes will automatically affect all other roles and assign new rights to them.

SA - Supermanager - administrator with absolutely all rights for administration


BA - Building manager - like SA, but with rights to manage only one building CM - Company manager - manager of one company (SA and BA can manage multiple companies)

DM - Department manager - manager of one department of one building of one company. (SA, BA and CM can manage multiple departments)

U - Individual - an ordinary person who does not have administrative rights

After creating a new role it shows like this and now we will give the permission access by clicking edit button

Adminstrtaion/Role management/role detail

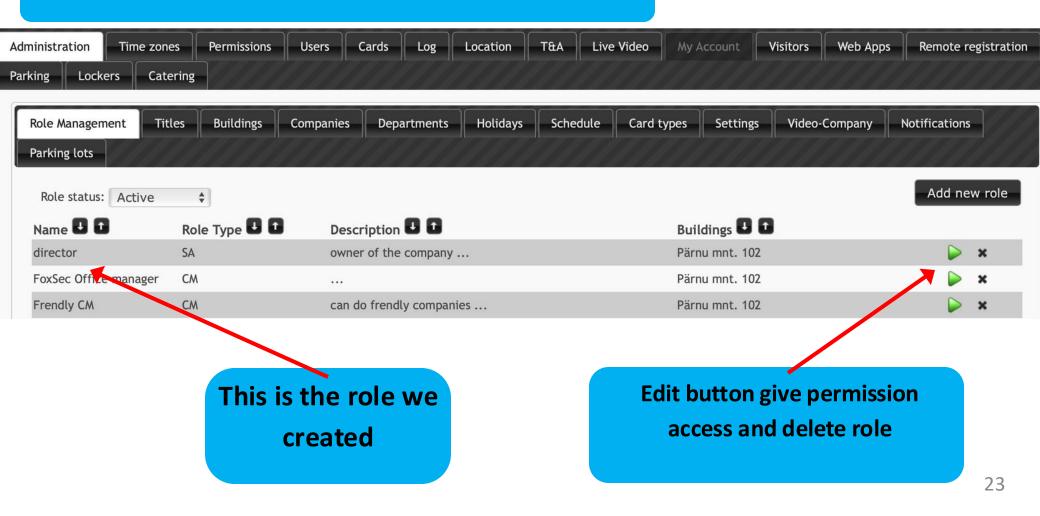

FoxSec WEB®

Administration/role management/menu access

director × Role title Director Description Owner Of The Company Active V Role type: SA O CM O DM O Buildings: V Pärnu mnt. 102 välja 22 Locker House parking Web Tabs Access Foxsec access ID Menu title Is allowed Administration -> Buildings menu 2 Administration -> Card Types menu Administration -> Companies menu Check boxes to Administration -> Departments menu give access Administration -> Holidays menu Administration -> My Company menu Administration -> Parking Administration -> Role Management menu Administration -> Settings menu 10 Administration -> Titles menu 11 Administration menu

NB! Some permissions are built in by default and can be changed.

The permissions allowed in the marked menu allow the role owner to make the necessary changes within the limits of the permissions granted to them.

Rights

assigned to the

role

FoxSec WEB

Administration/Role management/Menu Access

Role types


are

predefined

by the

developer.

Now we will give foxes access to selected role same as menu access

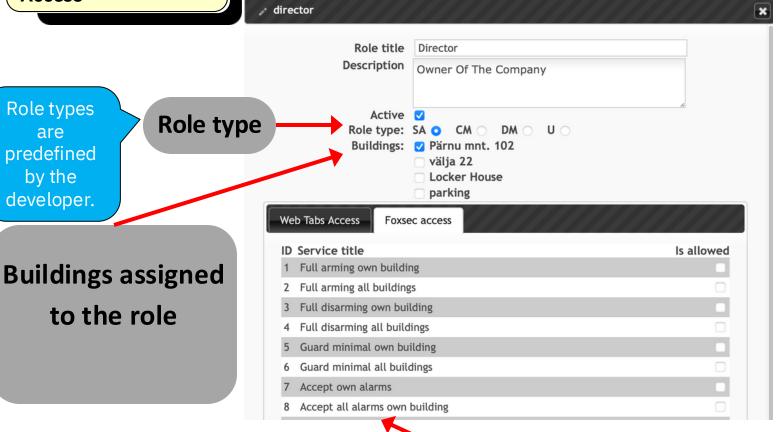


NB! All roles already have default active permissions, which can be changed by the owner of a higher role.

Selection of security settings assigned to a role



Timezones


Time zones are added to groups and apply to all group members.

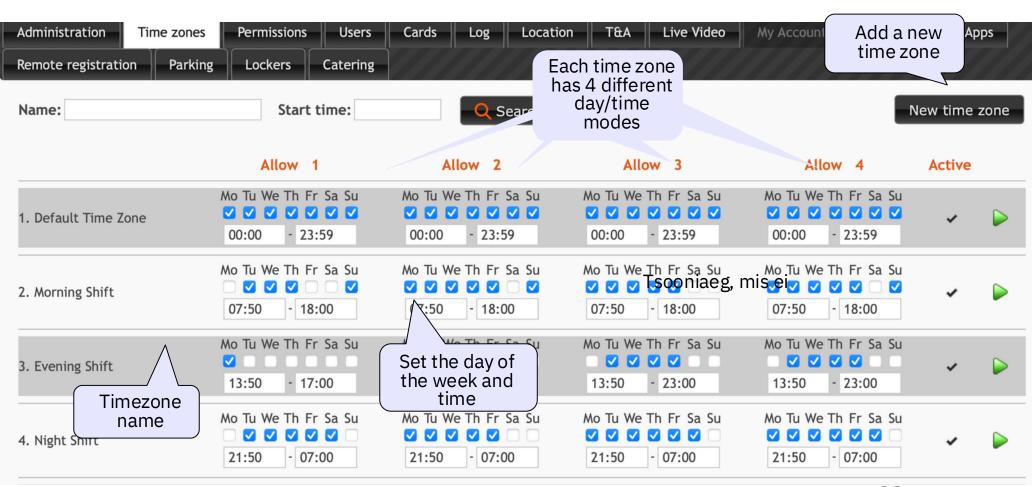



Time Zone /Add new time zone


- Pirst you have click on "New time zone" button to add time zone.
- ? Add time zone name.
- By default 4 different day/time sets for each the zone.
- You can change the days and time for that time zone you have crated by clicking on the edit button.

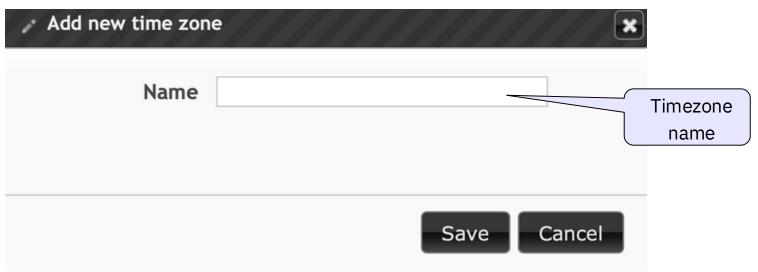

FoxSec WEB Permissions tab **Select permission** group Location Ta.\ Live Video Administration Time zones **Permissions** Cards Visitors Web Apps Users Log My Account Remote registration **Parking** Lockers Catering Create new - Select permission group - ▼ No group selected... Time zone name: Start time: Search **ESTONIA** + LITHUANIA Search timezone using Add new permissions A group must have a designated time filters zone. Each group can only have one time zone. A time zone gives the group members access to the facilities they need on the days of the week and at the times they are assigned. 28



Permission group that is assigned to users

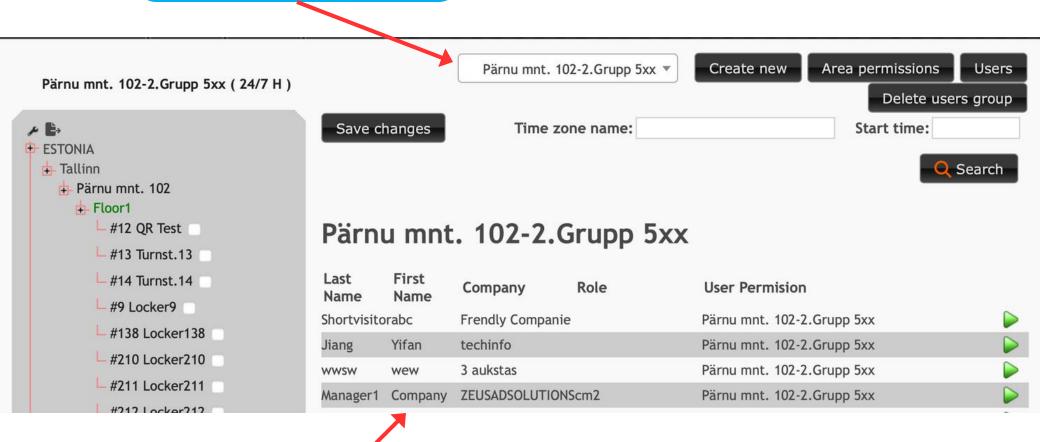

List of users for the selected permission group

Permissions/Create new permission

- Pirst you have click on Create New button to add new time zone.
- Enter name for the time zone
- If you will see a 'Copy Data From' dropdown. To assign an existing permission group, select a value from the dropdown; this will assign the selected permission group to the one you are creating. If you do not wish to assign a new permission, leave the dropdown unselected


If you not copy data then you will redirect to another page where you have to assign Time zone and access permission.





Permission/Create new permission/assign time zone and access permission

If we did not copy data then we have to assign time zone and access permission Building objects and time zone must be selected

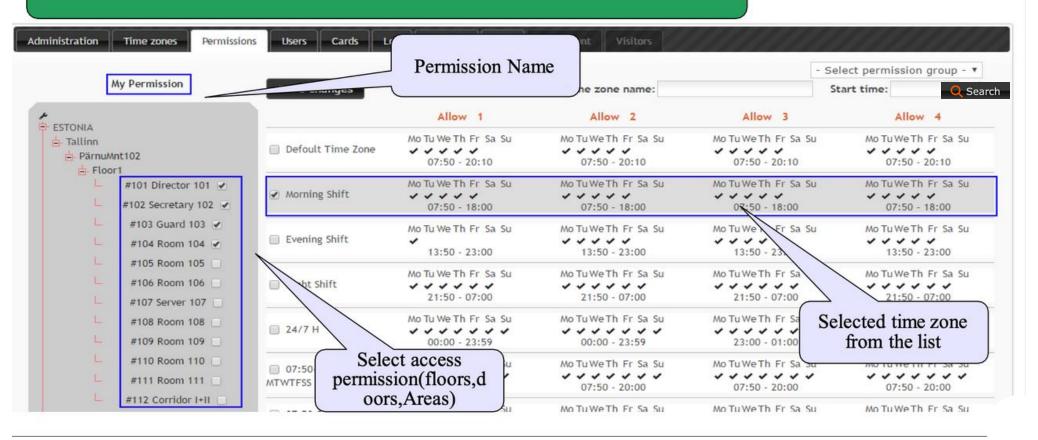




Permission/Create new permission/edit permission

- Now we can edit and delete permission we have created using edit button.
- We can add and delete access permissions for selected permission group.
- We can also change the time zone that we have assigned.
- 2 We have to search time zone and select new time zone from the list

By default there is no users for this permission because its new permission created. When Users select this permission group you will get users detail after that.

FoxSec WEB®

Permissions- changing doors in zone time

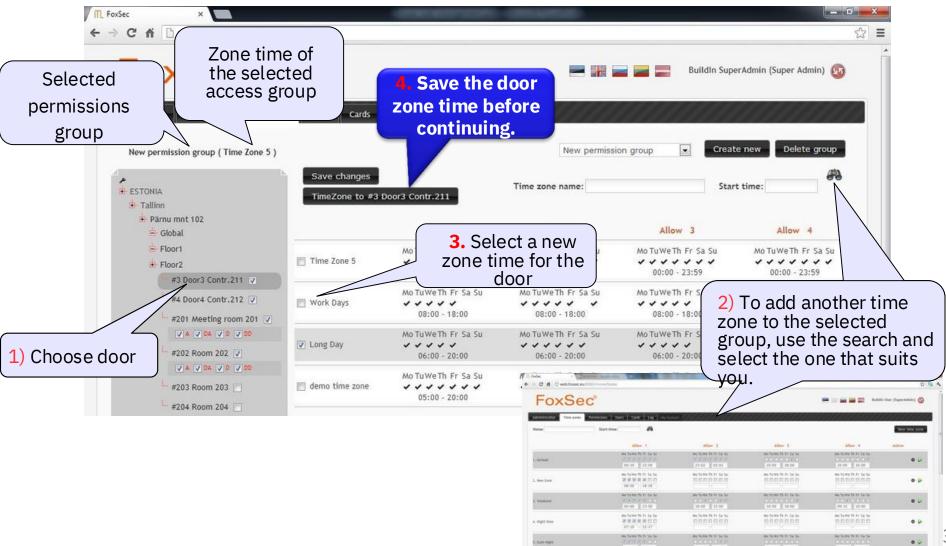




Users tab


The institution has 2 terms with different meanings: 1. Web users (have a role)

2. Persons – (do not have a role)

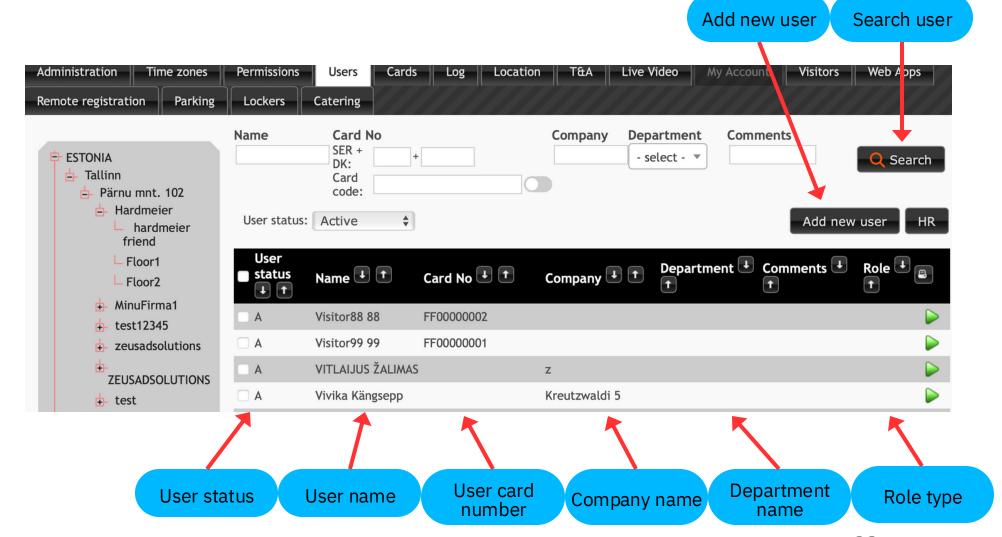

User Tab/HR button

You must choose the intended user and press 'Add/Change.' If a new user is added or if the user already exists, their name, company, department, and end date will be overwritten with HR data

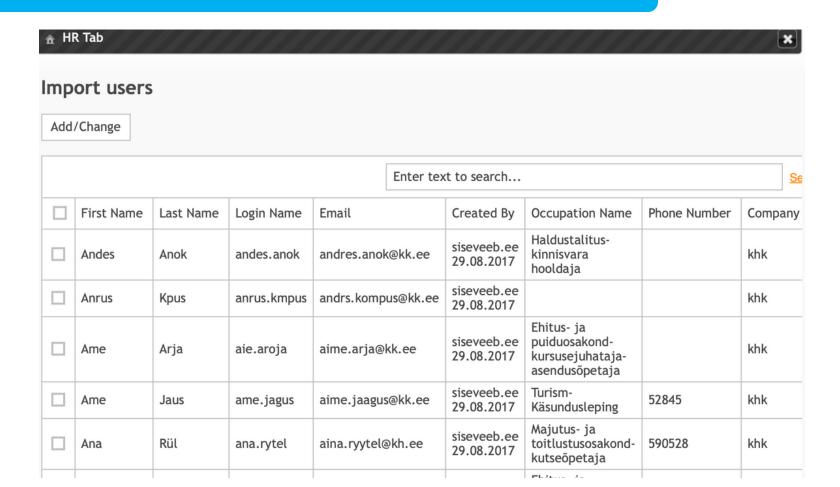

Once all essential administration tabs are created, you can proceed with creating a new user.

There are several tabs to create a user, some of which are optional.

Click on the "Add New User" button located in the user tab.


First, you will see the "Personal Data/Personal" tab.

First, fill in the personal details of the user:

- 1. Select the company for the user.
 - 2. Enter the user's first name.
 - 3. Enter the user's last name.
- 4. The username will auto-generate, but you can edit it if needed.
- 5. Generate a password by clicking the "Generate Password" button.

First, we need to fill in the user's personal details:

- 1. Select the company for the user.
 - 2. Enter the user's first name.
 - 3. Enter the user's last name.
- 4. The username will auto-generate; you can edit it if needed.
- 5. Generate a password by clicking the "Generate Password" button.
 - 6. User ID is not in use currently; you can leave this field empty.
 - 7. Enter the user's email address.
 - 8. The internal User ID field is optional.
 - 9. The external User ID field is optional.
 - 10. Enter the user's date of birth.
 - 11. Generate a PIN by clicking the "Generate PIN" button.
 - 12. Select the user's preferred language.
 - 13. Upload the user's photo (optional).

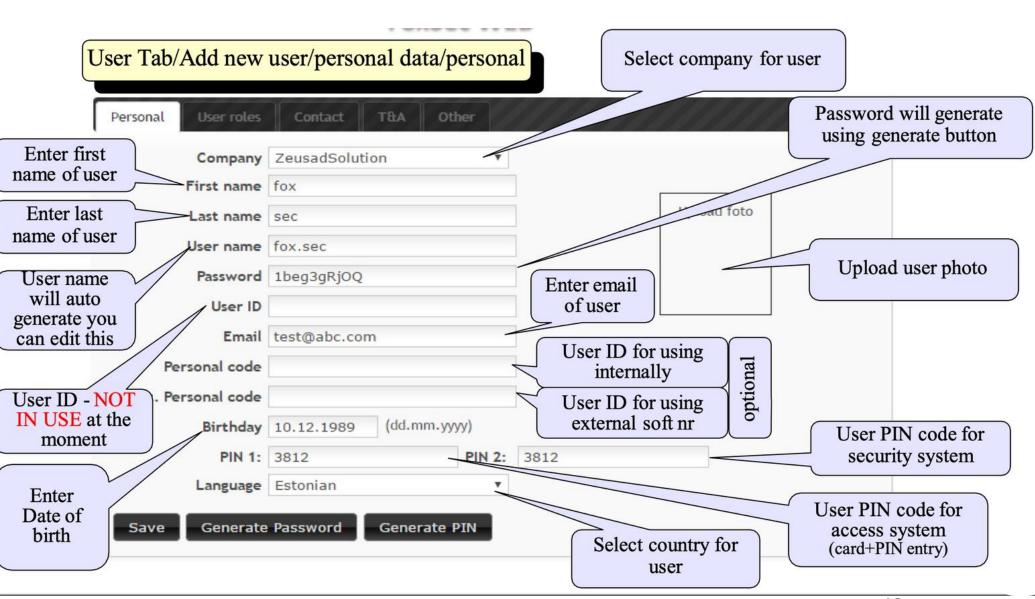

User Tab/Add new user/personal data/user role

After saving the user's personal data, other tabs will be activated for the user.

- 1) Navigate to the "User Role" tab.
 - 2) Select a role from the list.
- 3) Enter the validity period for that role.
- 4) Only one role can be selected for the user.
 - 5) A role must be selected for the user.

There is an option to add services for the user. You can add these services by checking the corresponding checkboxes. The services are:

Card alarm to email: If the e-service is running and door alarms ("door opened by key" and "door too long open") are declared, the alarms will be sent to email.

E-service allowed: System technical information is sent at 03:00 each night, and at 09:00 and 15:00 system tables (if available) are emailed. This includes expired cards and users who have left the organization (if HM integration is enabled).

Is visitor: All user permissions and cards can be granted to visitors.



User - add role

A user's role, depending on the role level, grants different rights.


| Personal User roles Contact | TEA Other In Control | |
|---|---|----------------------------------|
| E-service allowed Card alarms to email Cards monitoring to email Approve terminals | Services for the user Cannot add user 2FA A user can only have one administrative role during the validity period. Show pir | Is visitor Approve visitor Users |
| | user role validity period | active role |
| ID Role title | Validation period | Is allowed |
| 1 Administratorius_TEST1 | | |
| 2 Apsauga 2 | - | |
| 3 Aptarnavimo skyrius | - | |
| 4 BA | - | |
| Roles title | | |

User Tab/Add new user/personal data/contact

- 1. Navigate to the "Contact" tab.
- 2. This tab is optional for the user.
- 3. Enter the user's residence address.
 - 4. Enter the user's phone number.

This tab is optional for the user



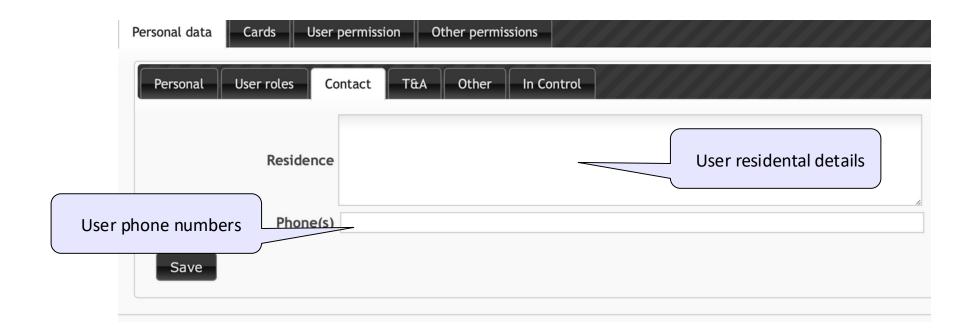

Building tab will show the tree view, it contains:


- 1) Country name
- 2) Location for building in the country
- 3) Building names in that particular location
- 4) Floor in that building
- 5) Rooms on that floor, we can add comments for the rooms. If we add comments then it will change into the green colour

Note- Countries, locations, building, floors and access door can be added/edited ONLY in FSConf software



Administration/ Building tab

NB! Countries, locations, buildings, floors and passages can ONLY be added, deleted and edited using the FSConf software.

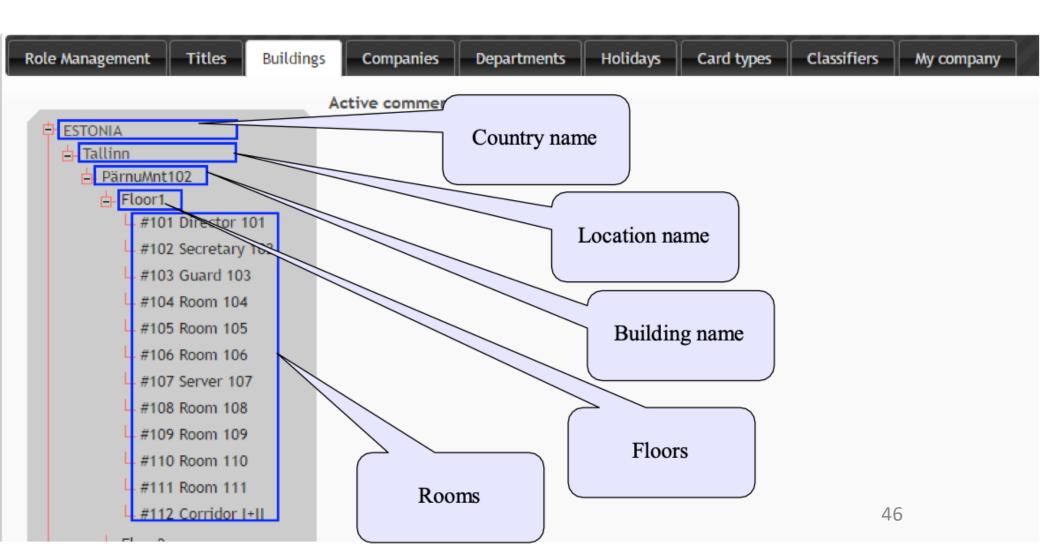


Administration / Holiday Tab

FoxSec WEB®

Moving holiday means holiday date will different in every year. by default holiday is set for the all buildings we can change buildings by the edit button

NB! The holiday mode applies to all access rights that are marked as holidays. If a user does not have access rights on holidays, they also do not have access rights on holidays.

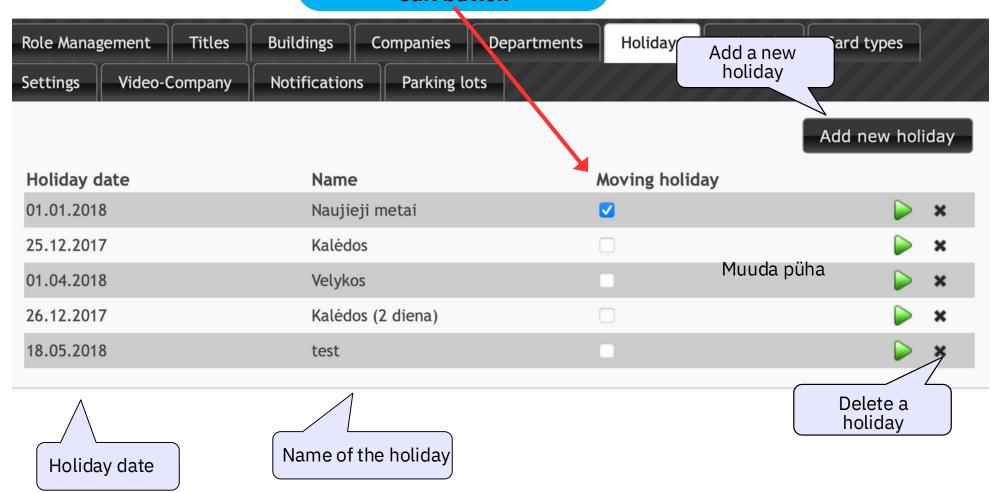


Adding a new holiday

- To add new holiday we click on add new holiday button.
- The we will add holiday title.
- Now we will select holiday date.

Note-By default holiday will set for all buildings.

If we want assign holiday for the specific building then we click on the edit button and uncheck the checkbox for all buildings and check specific building which we want to set holiday




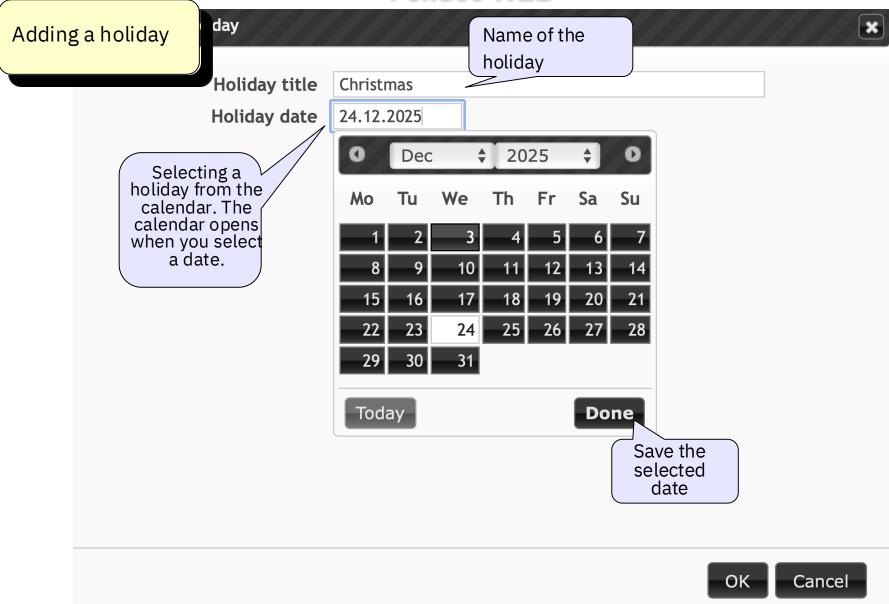

Administration/Card types tab

FoxSec WEB®

NB! Card types are defined by the developer. This only describes how to add card codes to the system.

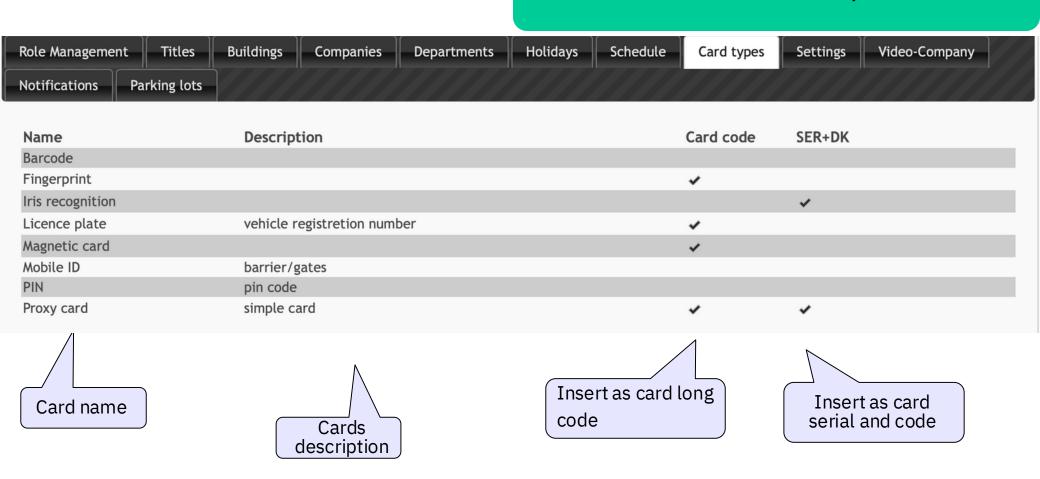


FoxSec WEB®

Administration/ (Settings) tab

Classifiers are used for the card, company and the user.


NB! Additional information is intended to provide additional information. Adding information is not mandatory, but an opportunity to clarify various situations.

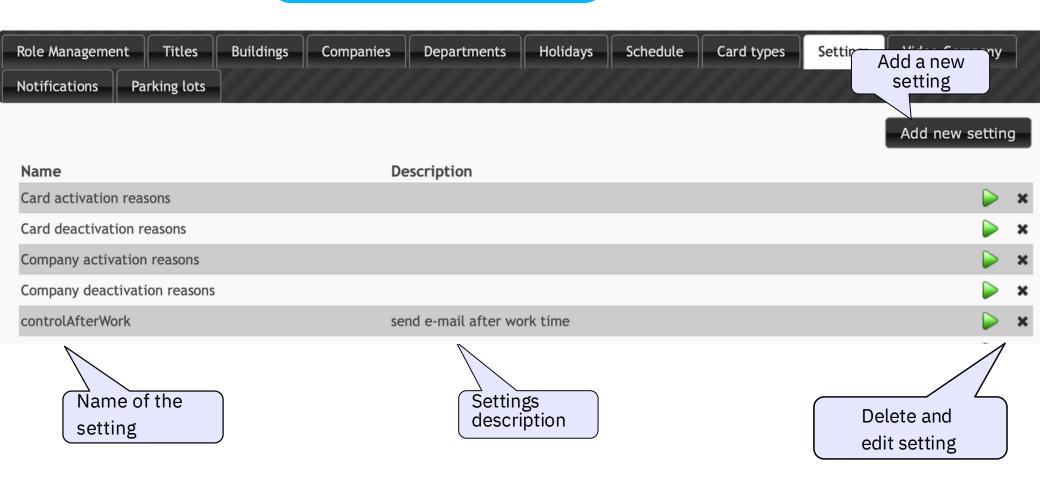

Administration/Add new setting

FoxSec WEB®

- To add new setting we have to click on add "Add new setting".
- Then add name and comment for the setting.

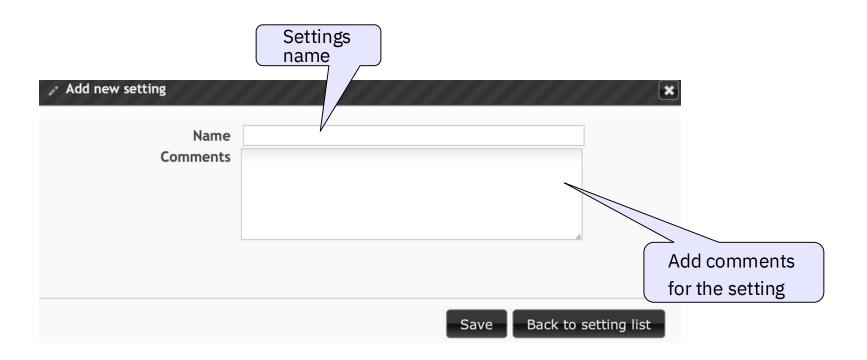


FoxSec WEB®

Value for the setting



value

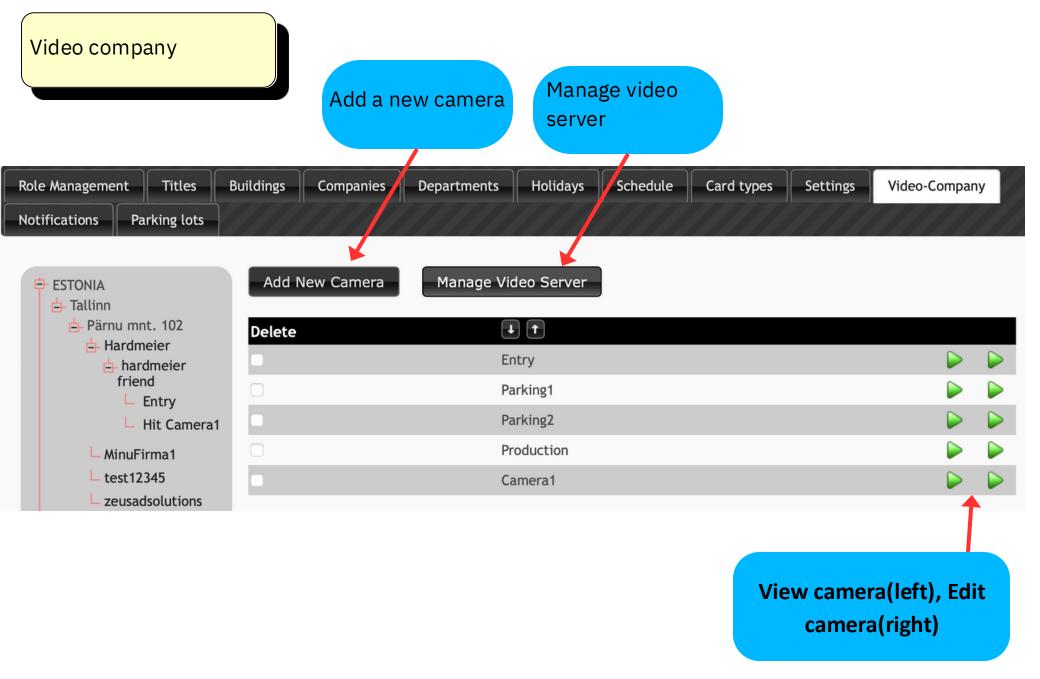


User Tab/Add new user/personal data/T&A(time and attendance)

- Navigate to the "T&A" tab.
- The "T&A" tab is for time and attendance management for the user.
 - First, select the building and its floor where the user works.
 - Then, add the department where the user works.
 - Select the user's title from the dropdown menu.
- If the user has a contract with the company, fill in the "Contract Nr" field with the contract name and validation period. This field is optional.
 - Enter the permit of work and the time attendance validation period.
 - Tick the "T&A" checkbox to enable time attendance for the user.
 - The "Table Nr" field is for accounting purposes and is also optional.




Add user workplace

Contract nr in case of any contract with the company. Enter contract name and its validity

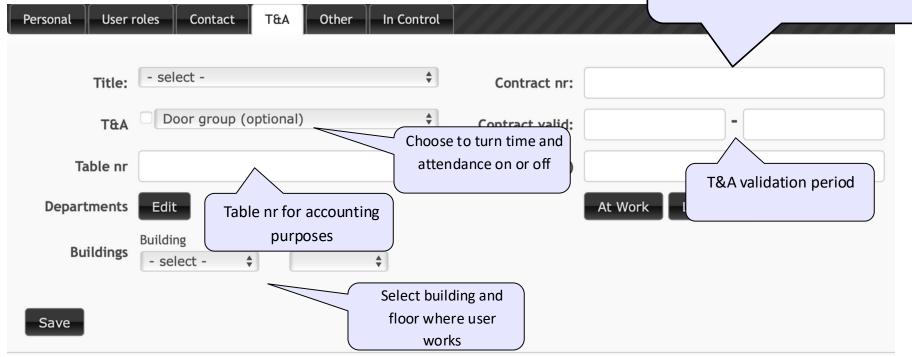

T&A adding a department

- To add a new department for a user, click on "Department".
 - Then a window will open.
 - Click on "New Department" in the new window.
- Select the department for the user from the dropdown, add the validity period, and tick the checkbox.

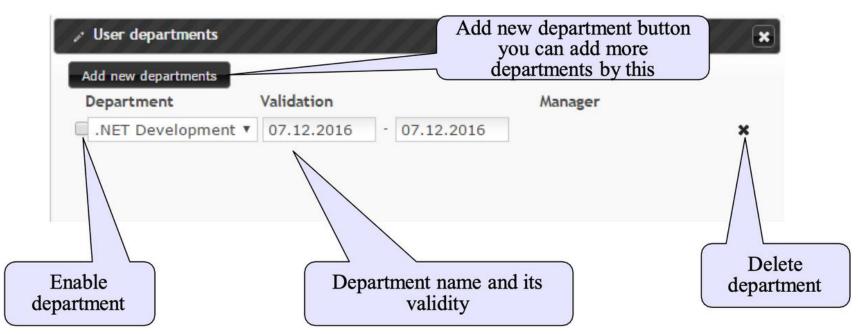


User Tab/Add new user/personal data/other tab

This is the optional tab for the user.


First, you have to add additional information.

Add the amount of coffee cups in special cases.

Add permission to the user so that the user can call a guest.

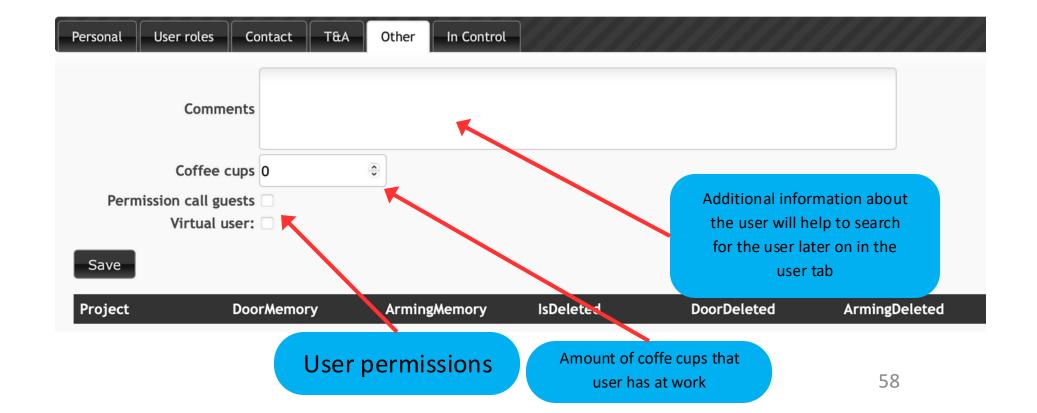

User Tab/Add new user/personal data/In control

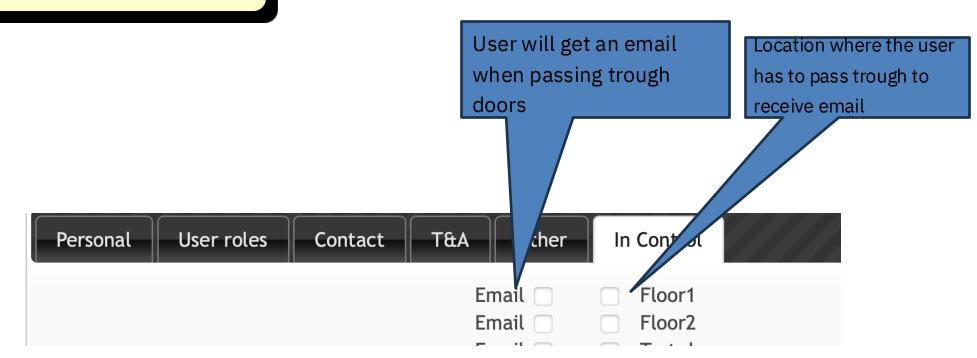

User tab/Add new user/card tab/add new card

Now we add cards for the user.

We have to click on the card tab of that user and then click on the "Add New Card" button.

Now, we have to select the card type from the dropdown.

Next, we have to add the SER+DK code. (SER would be 0-255, and DK would be 0-65535).


Insert it as the card value (special case). This is an optional field.

Select the building where the card has access permissions.

Add card validity.

User tab/add new user/card tab/add new card



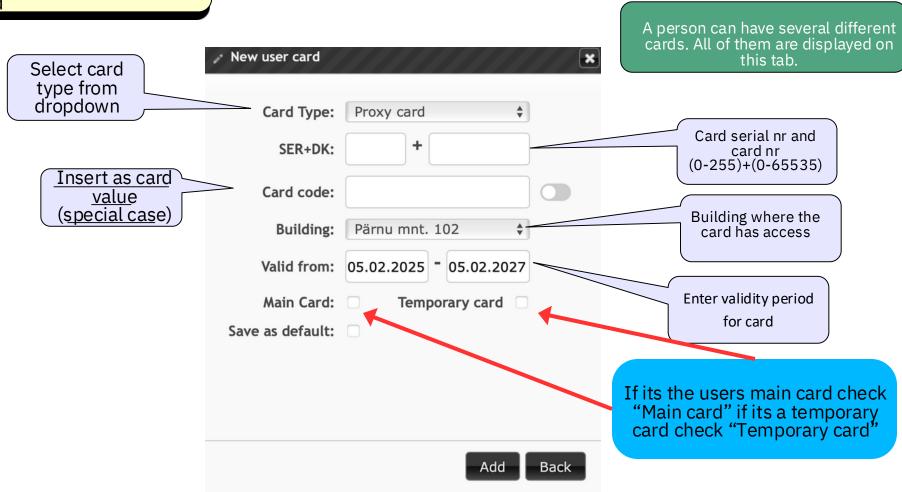

User tab/add new user/card tab/deactivating card

After saving the card tab, the card will be activated and will appear in the user's card tab.


We can deactivate and edit this card. To edit the card, we have to click on the "Edit" button, and we will get the same window as the "Add Card" window, where we can edit the details and add comments.

However, if we want to deactivate the card, we need to click on the checkbox of that card, and then we will get the "Deactivate" button to deactivate the card.



User Tab/Add new user/card tab/

All cards assigned to a person are located here

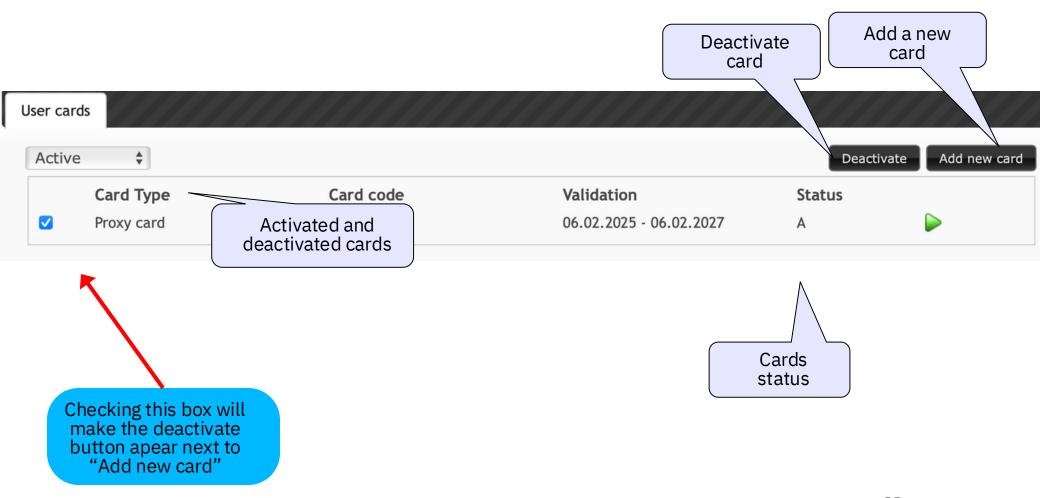

User Tab/Add new user/card tab/deactivate card

After clicking on the deactivate button, we simply have to select the card deactivation reason from the dropdown.

It will be deactivated, and the card status will change from "A" to "D.



User Tab/Add new user/permission tab

1. Now, we assign a permission group to the user.


2.We have to click on the user permission tab.


3.Next, select the permission group from the dropdown and click on the save button.

4.By default, there is no permission group for the user.

5.It will show the current permission group as "None."

We can assign multiple permissions to the single user using add button

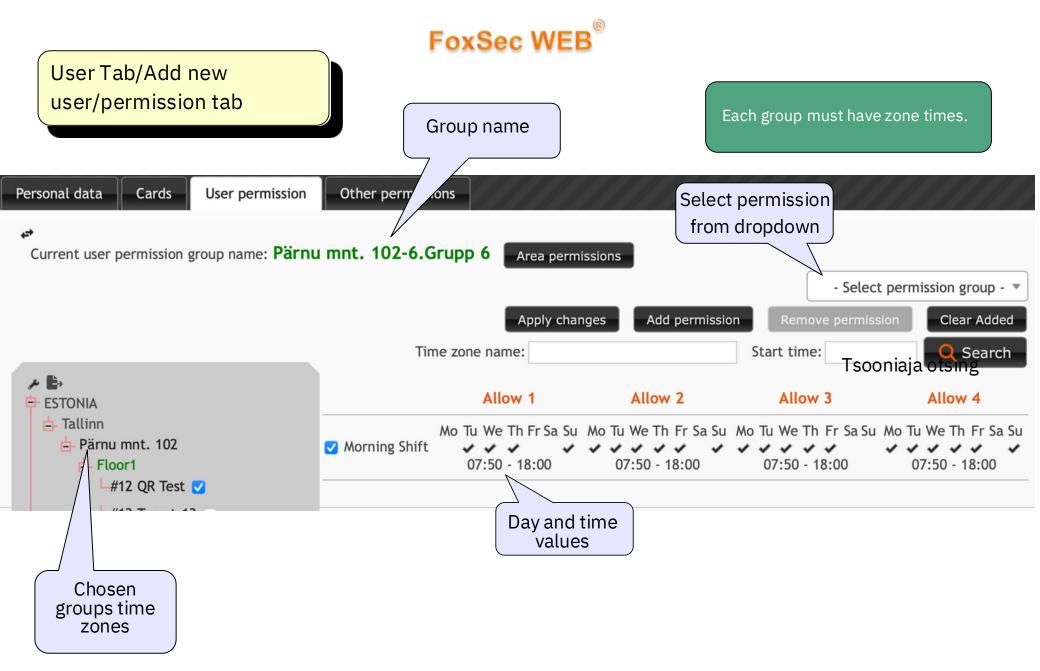

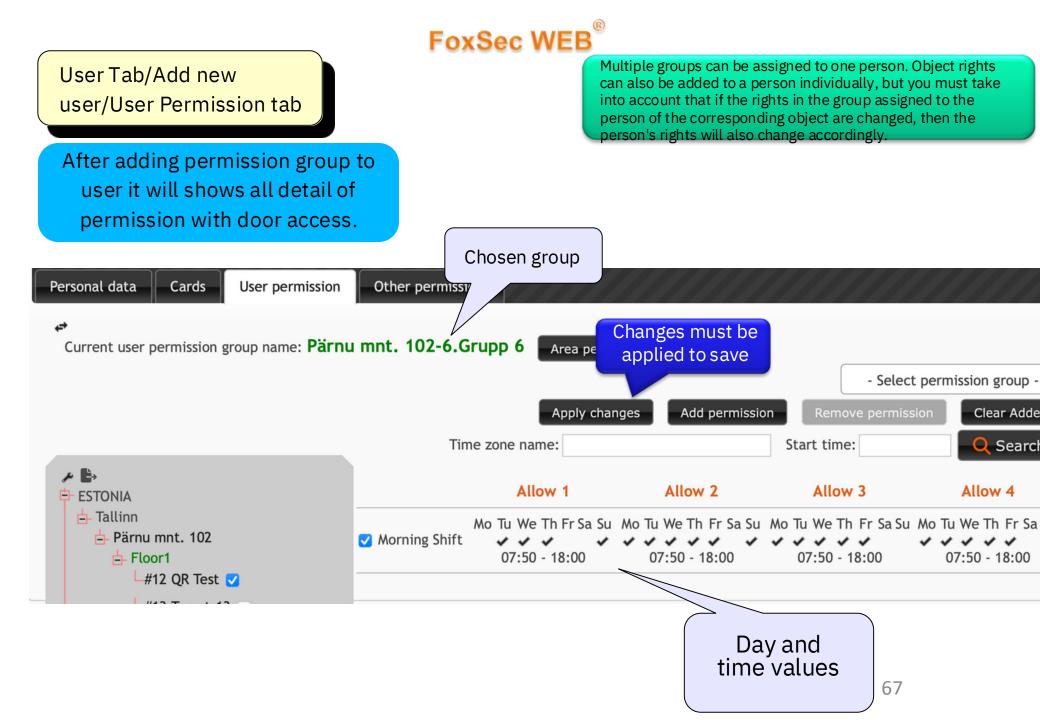

FoxSec WEB

FoxSec web as a Company managerlogin

Now we take a look in CM(company manager) when loggedin. There is changes in SA login an CMlogin.

SA have full access to foxsec web but CM havelimitation.

Like CM can see list of user of owncompany.

CM can add user to its owncompany.

CM can give permission group to user which he haveassigned.

CM can add role equal to its role and less then is role. CM can not add SA.


CM have access permission to its company.

We will see the screenshots where are the changes for CM.


FoxSec WEB

Role management tab for CMlogin


CM is a role type in role managemen

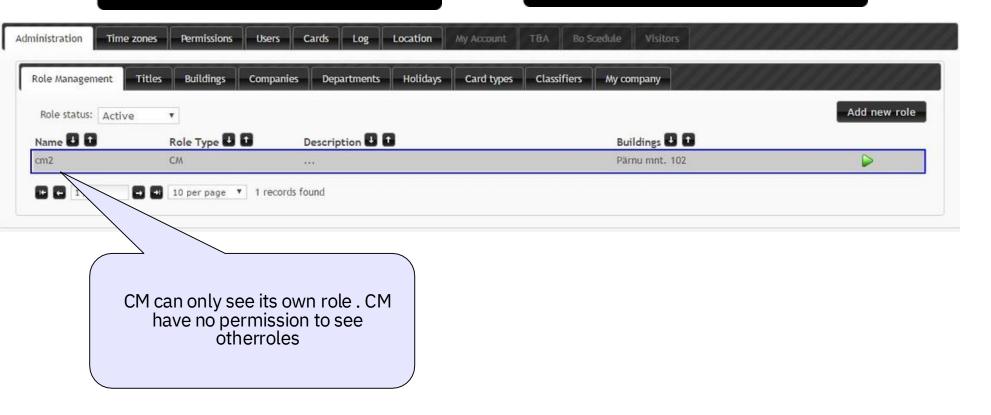



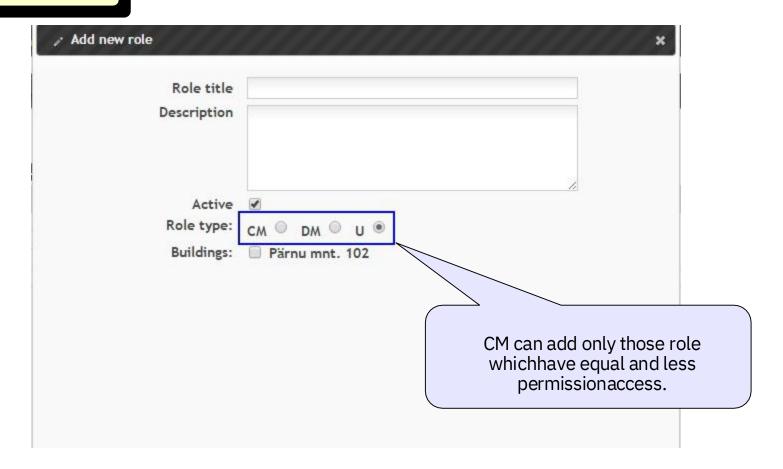



FoxSec WEB

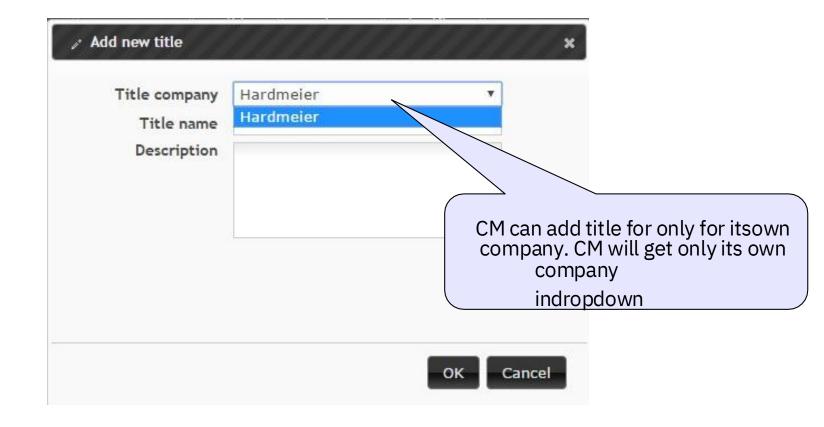

Permission tab for CM



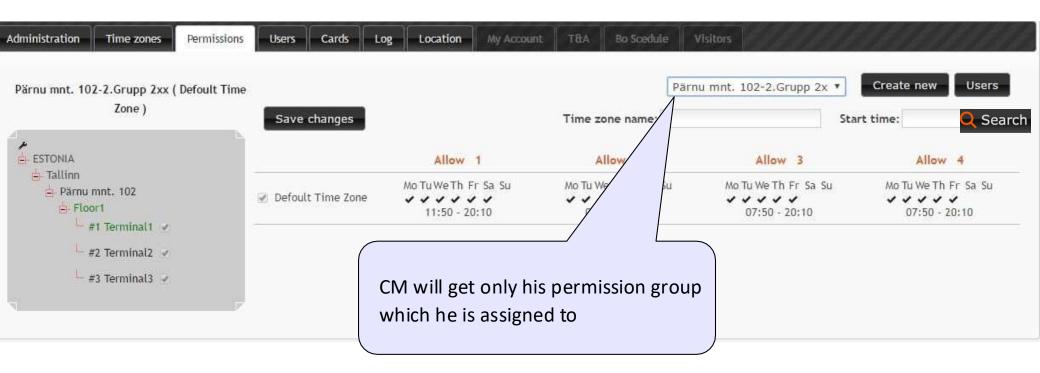


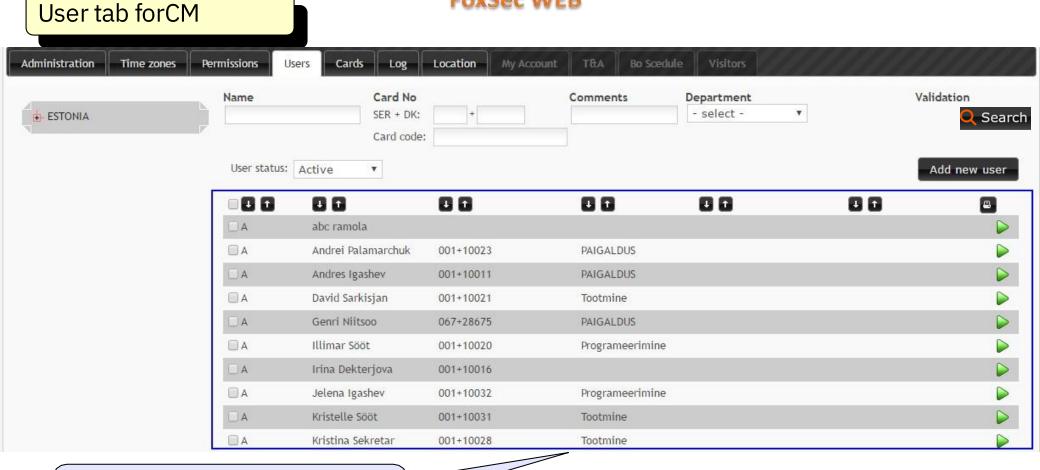

CM can see only the user of its own company



Add user tab for CM

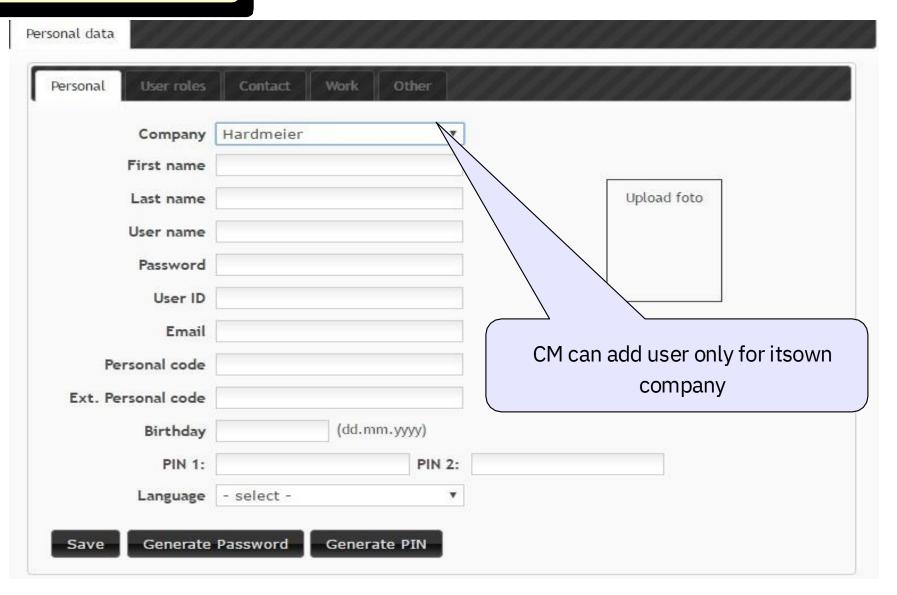

Now move on to cardtab. This tab shows all the card details. We can not add newcard. There are three types of card-Activated cards/deactivated cards/freecards.

Activated Card:


We can only deactivate this card or edit its details.

Deactivated Card:

• We can activate this card, add it to the free card pool, assign it to a new user, or edit its details.

Free Card:

• We can delete this card, move it to another building, assign it to a new user, or edit its details.

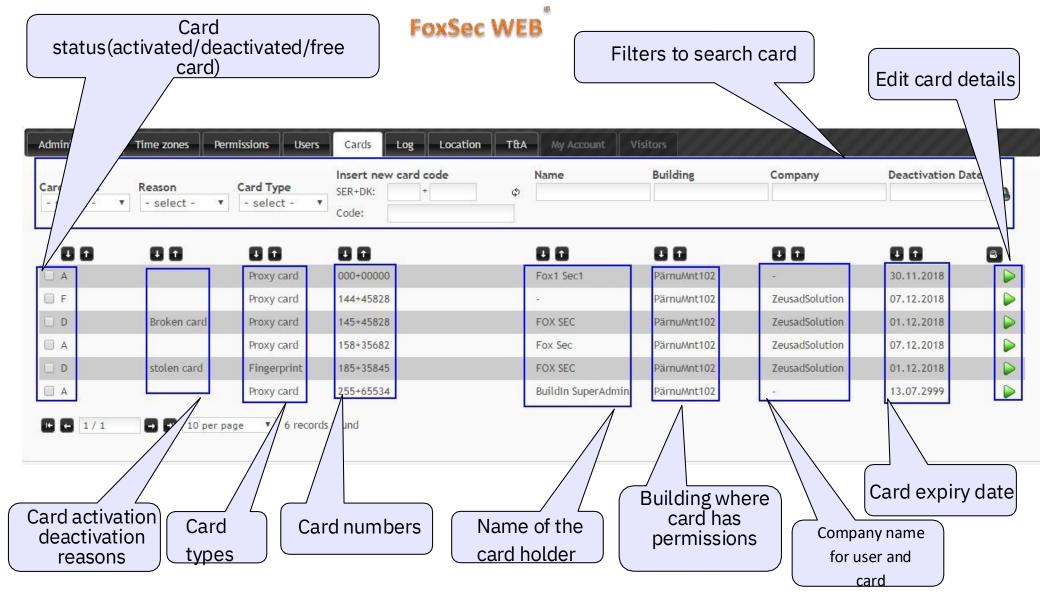



Cards tab/deactivate activatedcard

To deactivate card just tick the checkbox of activated card. Then you will get deactivate button. Click on this button you will get popup and select reason to deactivate this card.





Cards tab/Activate deactivated card

To activate card just tick the checkbox of deactivated card. You will get three buttons click on activate card.now select reason to activate card.



Cards tab/add to free card to deactivated card

Just tick the checkbox of deactivatedcard. You will get three buttons click on add to free card. Popup will ask to add to free card press add to free cardbutton.



Click this button to add free card


Cards tab/add deactivated card to newuser

Just tick the checkbox of deactivated card. You will get three buttons click on add card to new user. Then we will get a popup we have to fill the details. We have to enter empty fields. We can change the fields which are by default selected.

We have to change SER+Dk code if it is by defaultselected.

We can not assign same card to user.



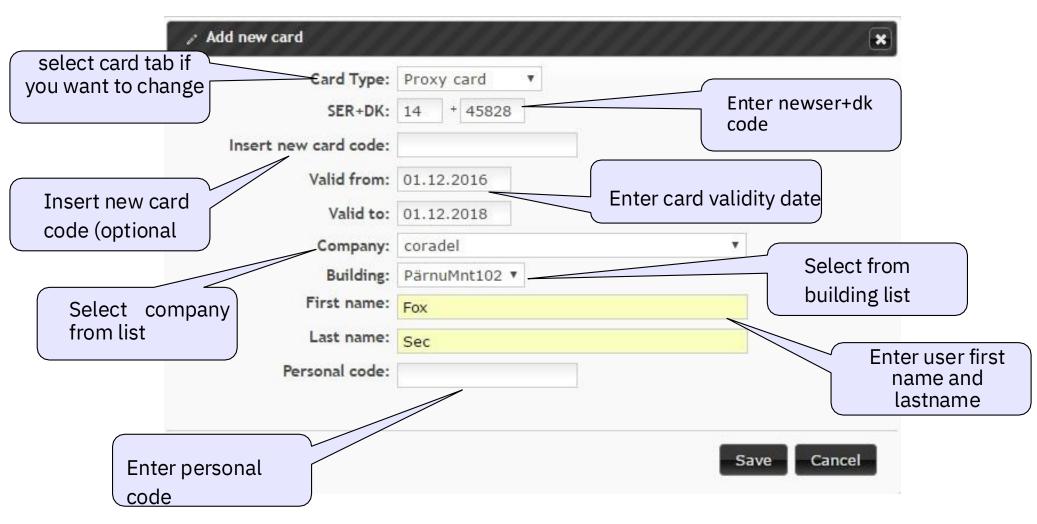



Cards tab/ move freecard

just tick the checkbox of freecard. You will get three buttons click on move cardbutton. Now you will get popup select the company from dropdown where you want to movecard.




Cards tab/ delete card

Just tick the checkbox of the free card. You will see three buttons—click on the Delete button. A popup will appear with a confirmation message. Simply press the Delete button, and the card will be deleted and disappear from the cards list.




Just tick the checkbox of freecard. You will get three buttons click on add card to new user. Then we will get a popup we have to fill thedetails. We have to enter emptyfields. We can change the fields which are by default selected.


We have to change SER+Dk code if it is by defaultselected. We can not assign same card no touser. This process will same like deactivated card to add to newuser.

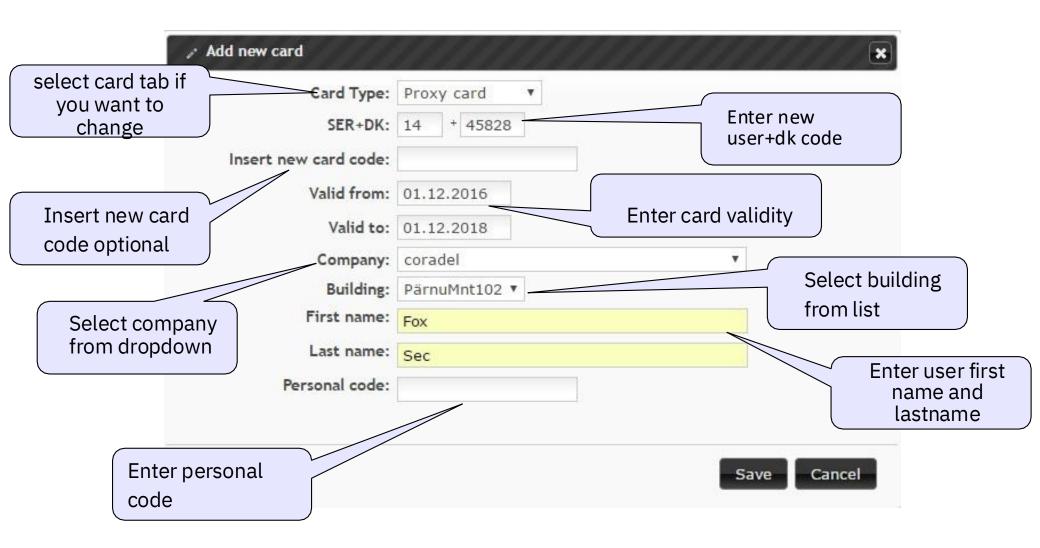

Log Tab

Log tab will show you the complete log detail of user .when user starts and ends thework. It will also show the log detail of login user at foxsec web at the movement it will show all activity of user what user does in foxsec web application. From login time to through out logout every changes that user makes in application. We can search log details using the filters. We can create custom filter to search log detail.

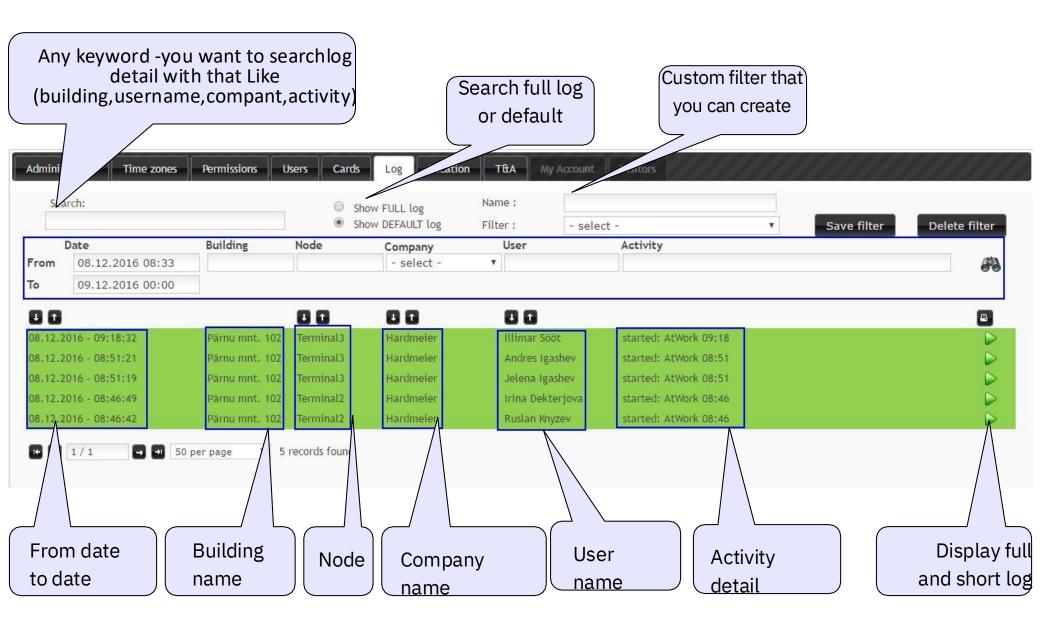


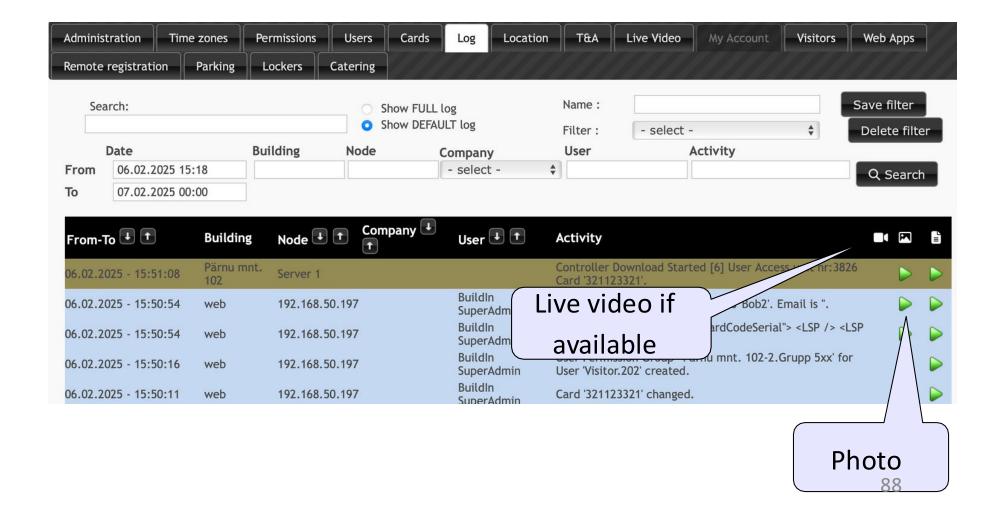



Location tab

In the Location tab, we can search for user logs by location. To do this, simply enter the From and Todates, select the company, and choose the question. This will act as a query to search for the user log.

Questions will add threw the foxsecconfapplication. In this page is possible to set up questions based login. This form is useful to quickly get information about person in permises, floors, building etc. this function is mainly used in big buildings and territories.

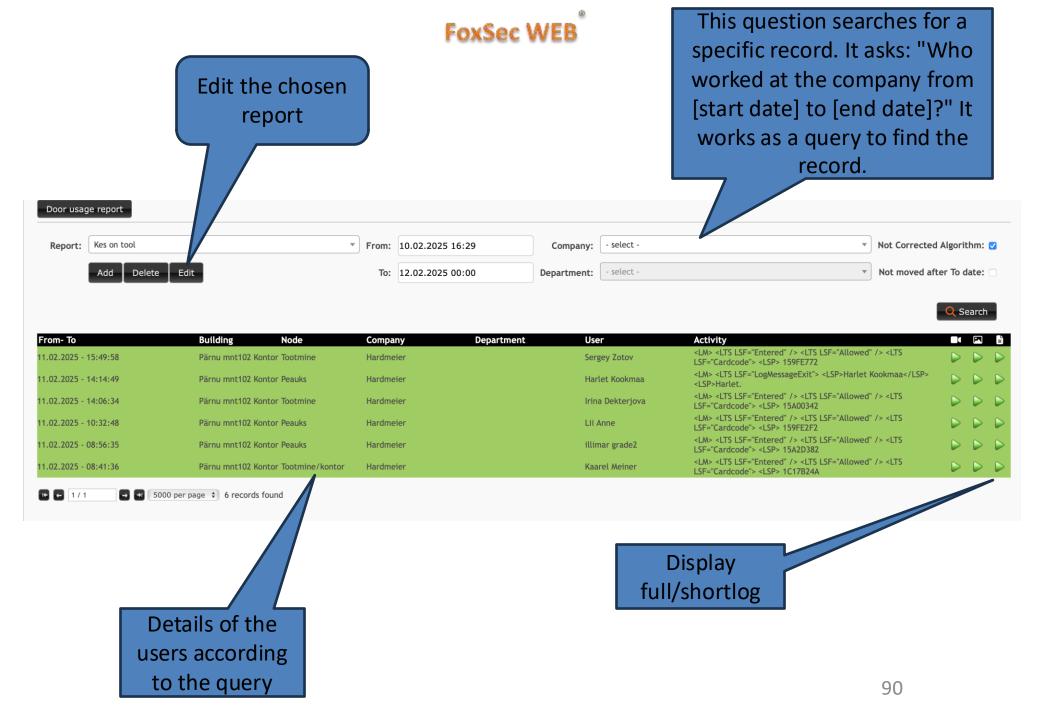

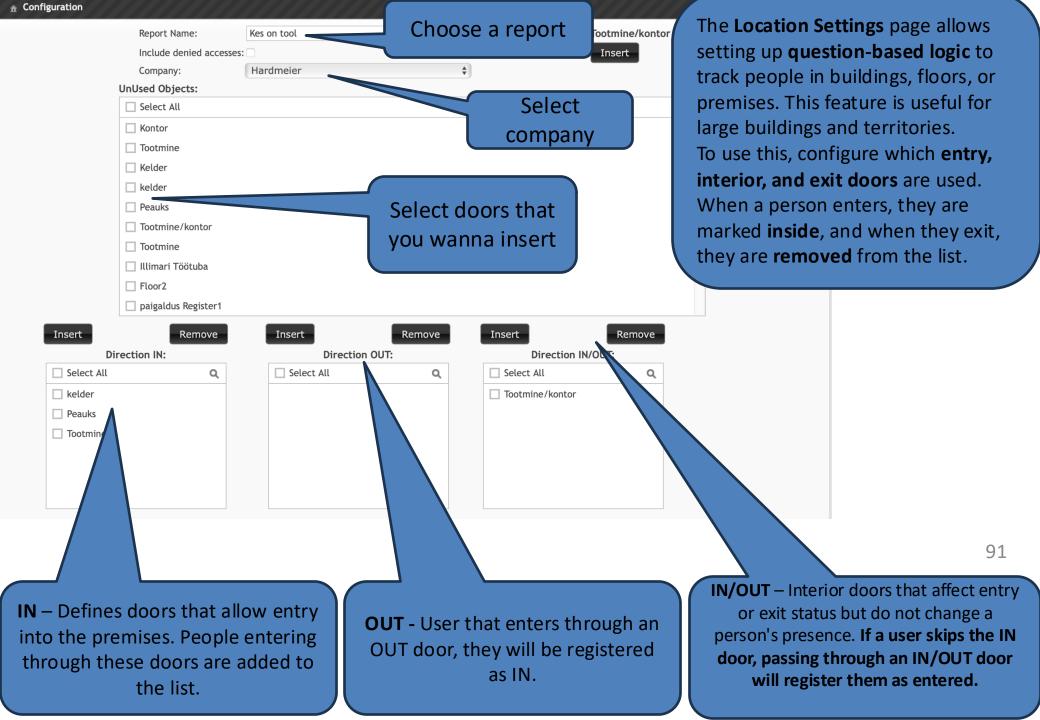

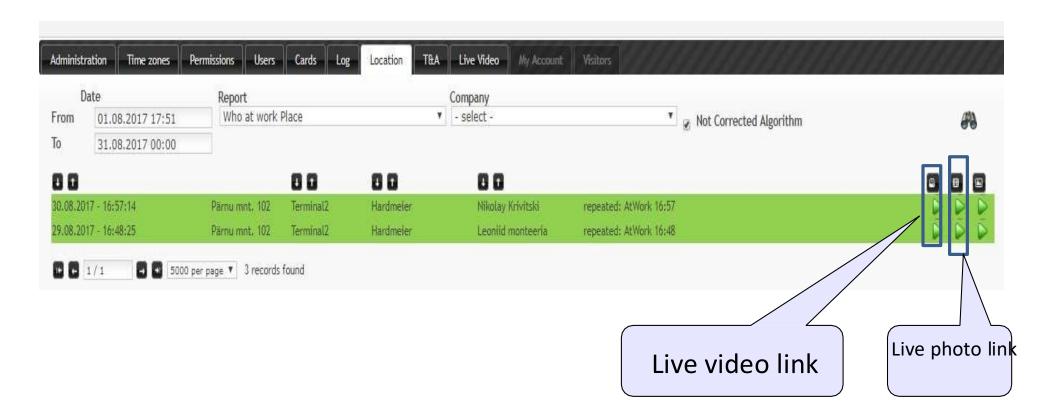

Location-foxsec conf application to add questions

In the Location Settings page, you can set up question-based logic. This form is useful for quickly gathering information about people in premises, floors, buildings, etc. This functionality is primarily used in large buildings and territories.

For these questions to work, it is first necessary to configure the correct settings, specifying which doors are used for entry and exit. Multiple questions can be created.

Information about individuals is displayed in the FS Access server software and the personnel data software. These settings can be found under General Data in Location Settings.

To create a new question, click the Add button.

Location-foxsec conf application to add questions

For a correct question, it is necessary to specify entry doors, entry/exit (interior) doors, and exit doors.

Doors are set in three groups:

- 1. Doors that are for entering the premises (entering into the question).
- 2. Entry/exit (interior) doors that do not make a difference in the question (still in the premises).

3. Exit doors (leaving the question).

Questions work based on the last movement. If a user enters, they are automatically added to the list of people who are at the premises. If the user exits through a selected door, they are removed from the question (set as left).


This tab is for time and attendance.

- This tab basically shows all the reports of users.
- We can search records using filters such as date range, company, department, etc.
- There is no search button; filters will automatically work when we click on reports.


There are five sections on this page:

- 1.T&A building objects
 - 2. Month report
- 3. Coming and leaving from work
 - 4. Details report
 - 5.Export

How many previous days to recalculate

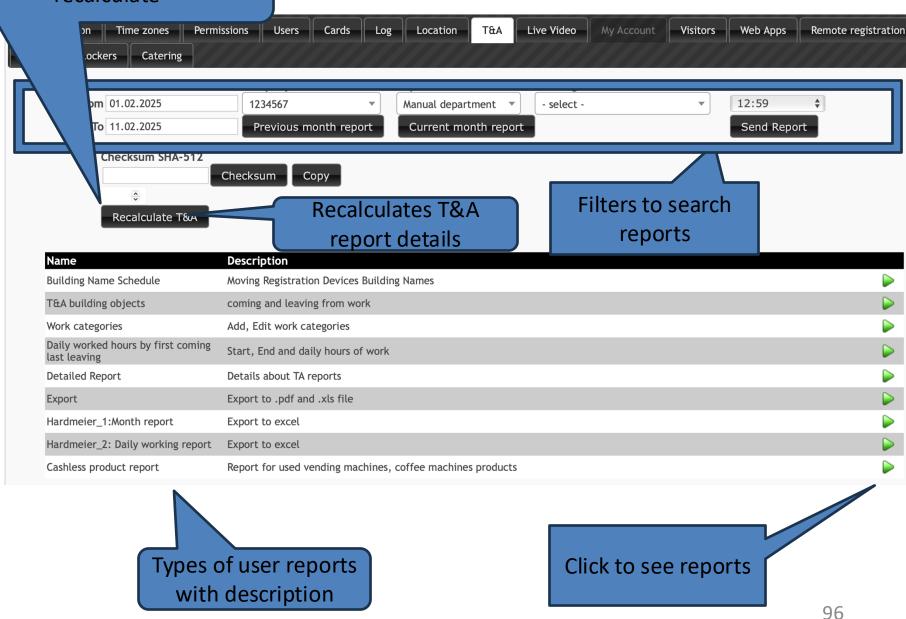


After clicking Display Report in T&Atab

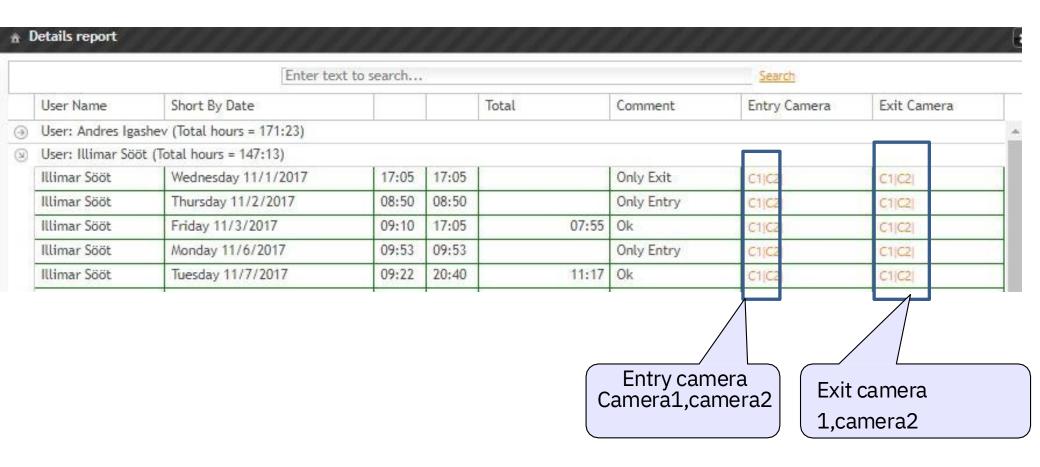



T&A building objects


list of building objects (doors) which are used to working time records. Search building object

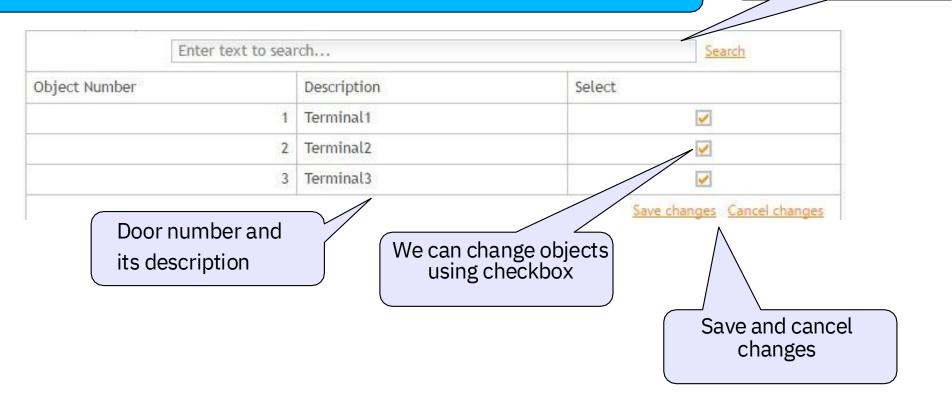

Monthreport

It will show the monthly report of the user based on the date range you select. It will display the total working hours of the user per day.


At the end, it will show the grand total of the user's working hours.

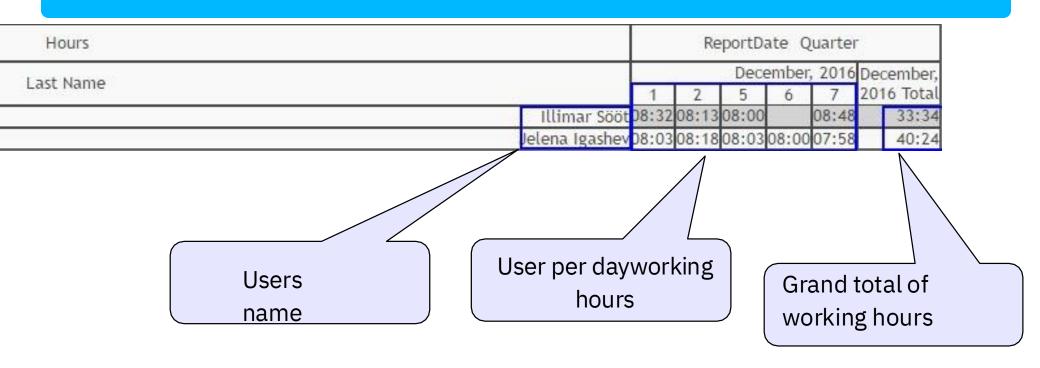



2. Month report/Edit report

We can edit report we have click on employee hours then we will get newwindow. We can delete and edit existing record as well as we can add newrecord. If we click in new button we will get blank row we can add values for it and then click onsave changes.

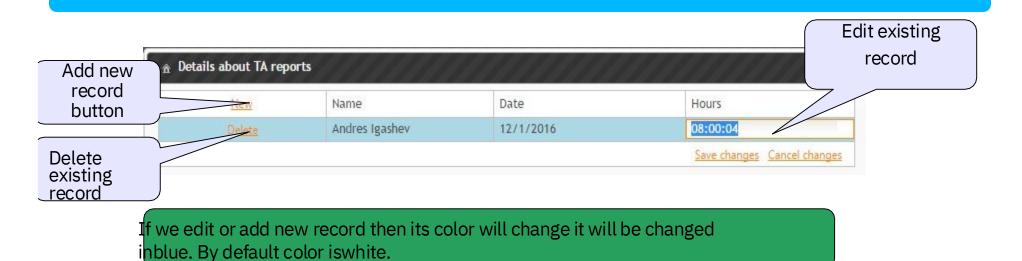

3. coming and leaving from work

This tab will show you daily coming and going details from work ofuser.


| | ReportDate Quarter | | | | | | | | | | | | |
|-------------------|--------------------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|--|
| | December, 2016 | | | | | | | | | | | | |
| | 1 | | 2 | | 5 | | 6 | | 7 | | 8 | | |
| | In | Out | In | Out | In | Out | In | Out | In | Out | In | Out | |
| Andres Igashev | 08:51 | 16:54 | 08:52 | 17:11 | 08:52 | 16:55 | 08:56 | 16:55 | 08:57 | 16:55 | 08:51 | 08:51 | |
| Illimar Sööt | 09:01 | 17:33 | 08:55 | 17:08 | 09:01 | 17:01 | 09:19 | 09:19 | 09:16 | 18:04 | | | |
| Irina Dekterjova | 09:03 | 16:43 | 08:47 | 16:24 | 08:48 | 16:44 | 08:47 | 16:44 | 08:50 | 16:45 | 08:46 | 08:46 | |
| Jelena Igashev | 08:51 | 16:55 | 08:52 | 17:11 | 08:52 | 16:55 | 08:56 | 16:56 | 08:57 | 16:56 | 08:51 | 08:51 | |
| Leoniid monteeria | 08:27 | 08:27 | 08:33 | 16:48 | 08:35 | 16:59 | | | 08:37 | 16:50 | | | |
| Raigo Saak | 08:57 | 16:54 | 08:51 | 16:52 | | | 08:53 | 08:53 | | | | | |
| Ruslan Knyzev | 08:40 | 16:54 | 08:39 | 16:49 | 08:54 | 16:50 | | | 08:42 | 16:45 | 08:46 | 08:46 | |

Users name

Daily in and out time from work of user

4. Details report

This tab will show you total working hours of all theusers.

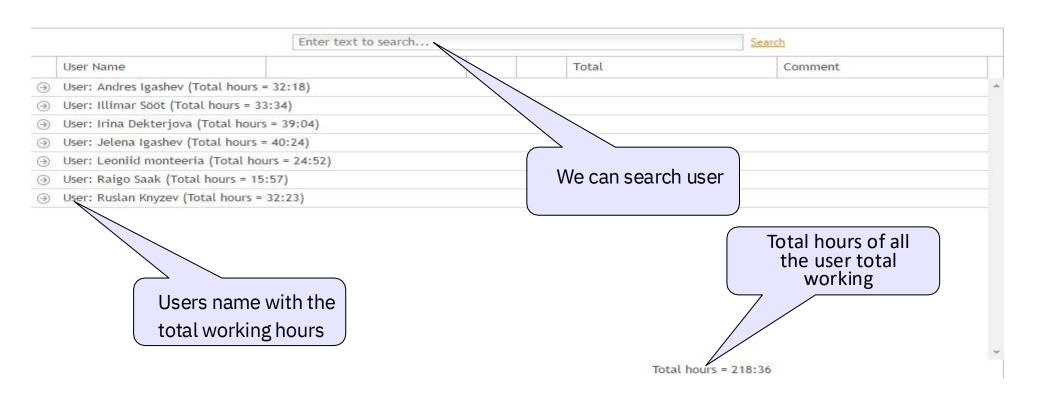

5. Export

We can export user monthly report into pdf and xls.

There are two option to export report detail report and report.

Detail report will export daily report with in out time of user. And report will export total monthly working hours of user.



FAQ's

What is Ser + Dk in the user card?

- Ser + Dk or Card Code is the access unit code; only one can be used in the form.
- SER (0–255) and DK (0–65,535); card code is limited to 50 characters.
- The system does not allow duplicate Ser + Dk or Card Codes.
- This field can be inserted via specific card readers or by reading data from the Log tab after scanning a card, fingerprint, or car number.

What does "Contract Nr" mean in the User Work tab?

• It refers to a user's contract with the company, including the contract name and validity period (from date to to-date).

What do "Work Time" and "Table Nr" mean in the User Work tab?

- Work Time determines if a person appears in work time reports (workers: checked, visitors: unchecked).
- Table Nr is used for third-party payment system integration.

Why is the Users button empty in the Permission tab?

• The selected permission group isn't assigned to any users. Once assigned, user details will appear.

FAQ's

In the Building tab, how do I add buildings?

- This tab does not allow adding buildings. It displays the number of buildings in a location, along with their floors and doors.
- To add a building, use the FoxSec Conf application, as mentioned in the manual.

What does "Number" mean in the Add New Department tab?

It represents the total number of departments in a company for a specific department.

What is a Moving Holiday in the Holiday tab?

A Moving Holiday is a holiday with a date that changes every year.

What are Classifiers?

Classifiers define activation and deactivation reasons for users, companies, and cards.

What is the use of "Copy Data From" when creating a new permission group?

- It allows copying permissions (such as time zone and building access) from an existing group.
- If assigning new permissions, do not select a value from the dropdown.

FAQ's

What is "Report" in the Location tab?


- A Report is like a query used to search for specific records.
- In the Location tab, it filters data based on criteria like date range and company to show who is at work.
- Questions are added through the FoxSec Conf application (see manual, page 79).

How many users, countries, buildings, building objects, companies, and hardware can be added to FoxSecWEB?

- FoxSecWEB has no software limits.
- Limits depend on:
 - a. Server performance
 - b. License restrictions
 - c. Controller user limits:
 - FS7000 series: Up to 1,850 users
 - FS8000 series: Up to 7,680 users
 - FS9010 & FS9000 security panels: Up to 2,880 users
- Users without door access control don't count toward FS7000/FS8000 limits.
- Users without security permissions don't count toward FS9010/FS9000 limits.
- Each project exported from FoxSec Conf to FoxSecWEB has a hardware user limit, but FoxSecWEB itself is not limited in the number of exported projects.

How to Access Video FromWeb



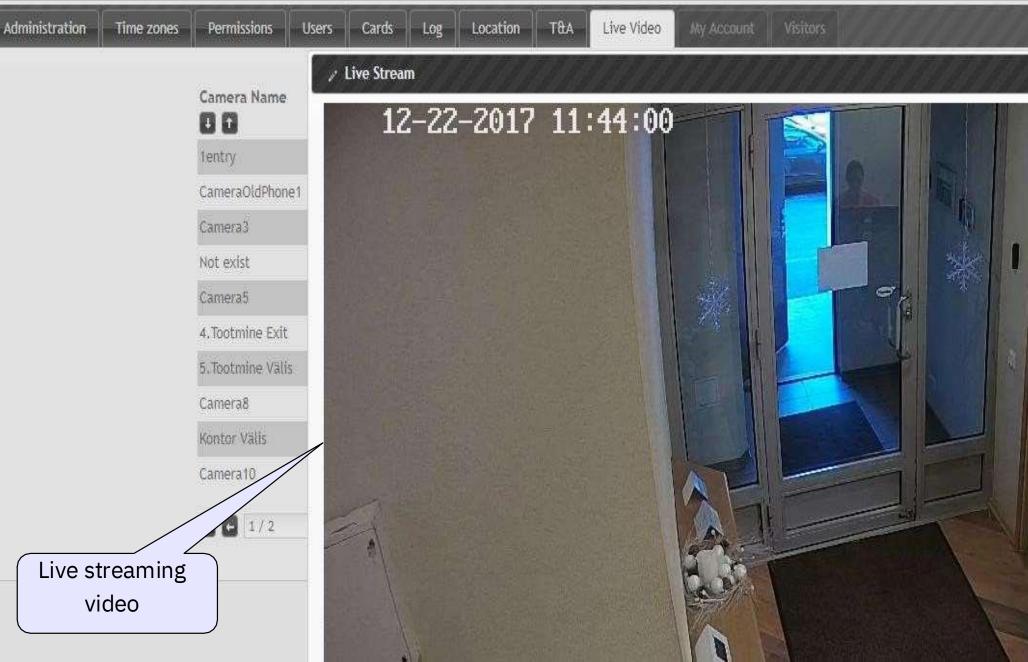

How to Access Video FromWeb

What is the Live Video tab?

- The Live Video tab displays a list of cameras, including:
 - a. Camera Name
 - b. Live Video Button (Click to view live video)

Who can access cameras?

- You can only see cameras assigned to your company, as decided in the Video Company tab.
- Only Super Admin can access the Video Company tab.
- Super Admin can assign or unassign cameras.

Video Company-Camera Assigning process to a company


How to Assign a Camera (Super Admin Only)

- 1. Log in using Super Admin credentials.
- 2. Go to the Video Company tab:
 - View the list of companies.
 - Select a company from the tree structure.
 - Assign or unassign a camera.


Camera Visibility in Live Video Tab

- You can only see cameras assigned to your company.
- The Video Company tab is accessible only to Super Admin.


Camera Assigning process to a Company

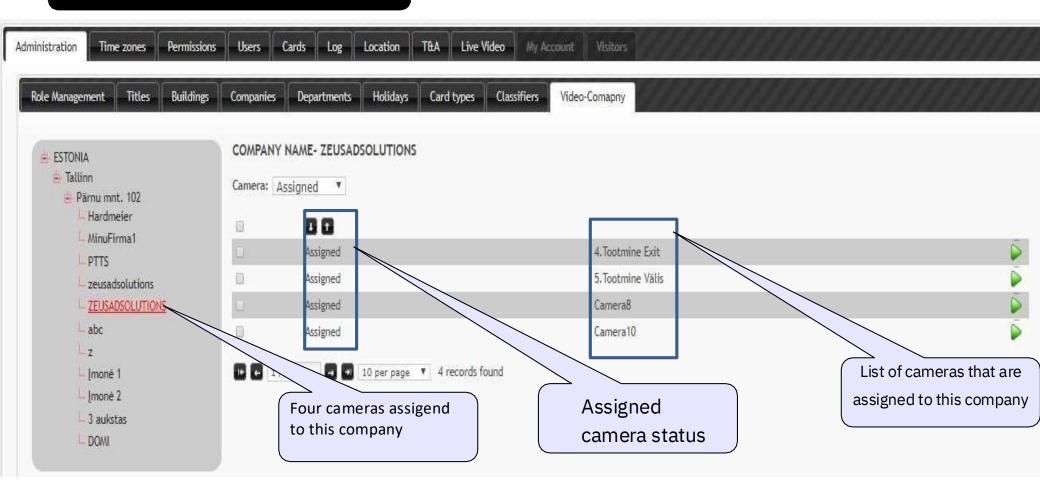


I Created a User assigned a role Manager to him and User Company is ZEUSADSOLUTIONS .Super Admin assigned to 4 camera to this company. When Manager will log in he will find four camera in Live Video tab

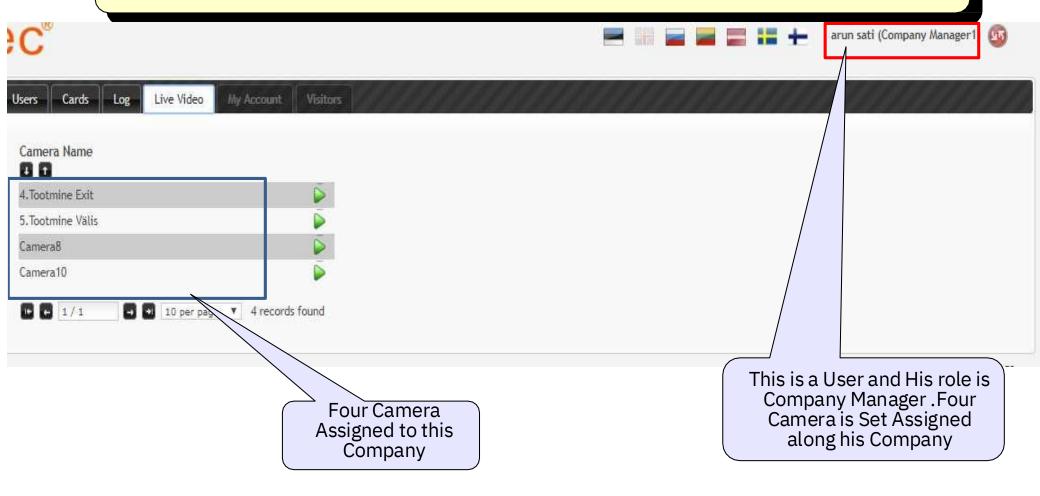


Video Company

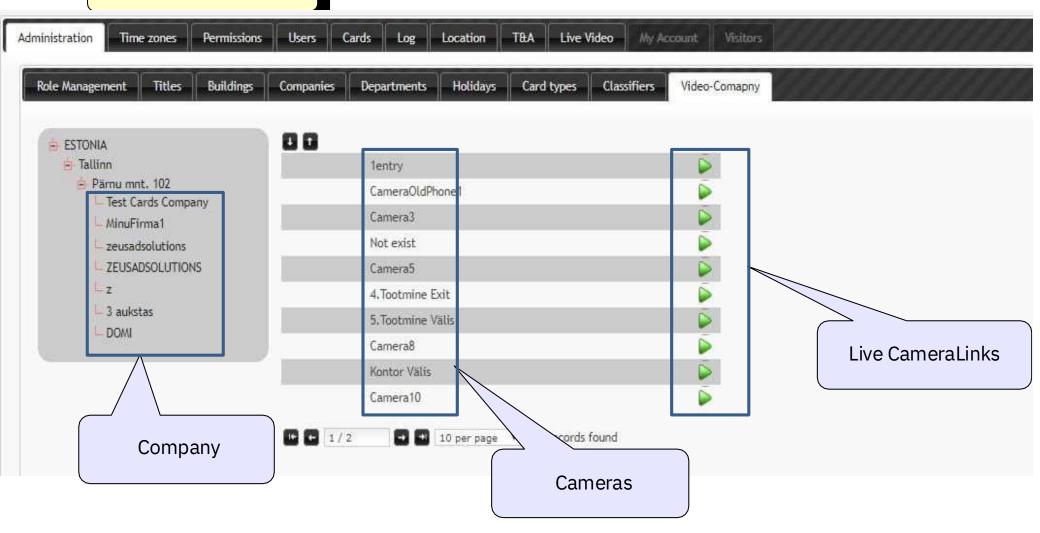


Camera Assigned To Company

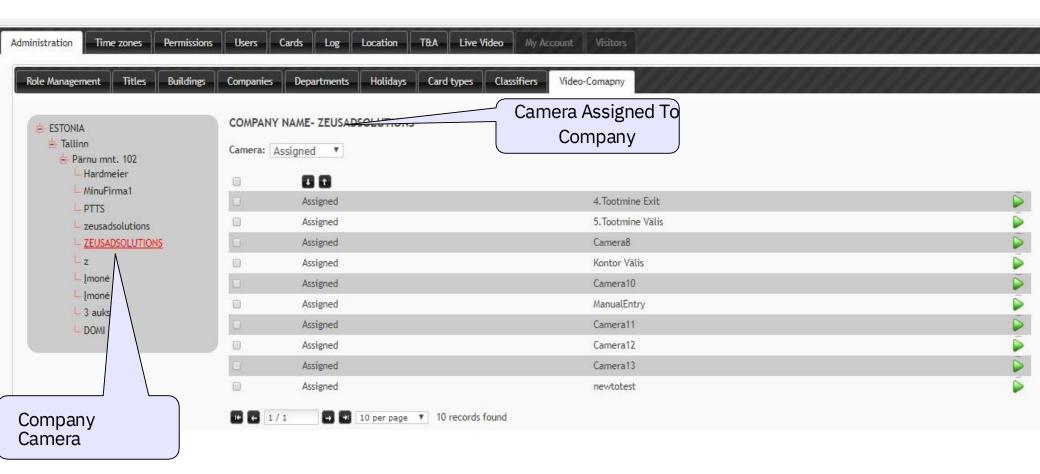

My company

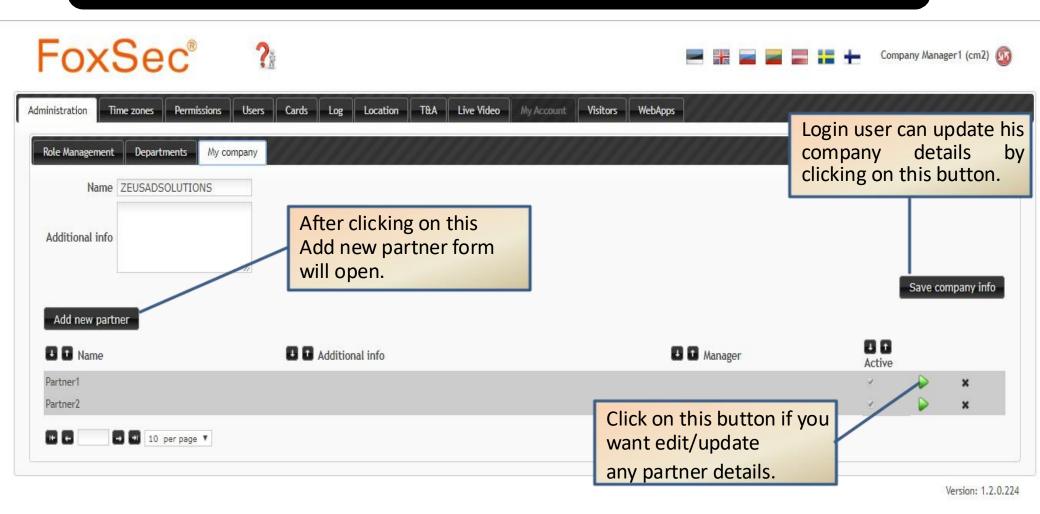


Add new partner and edit partner

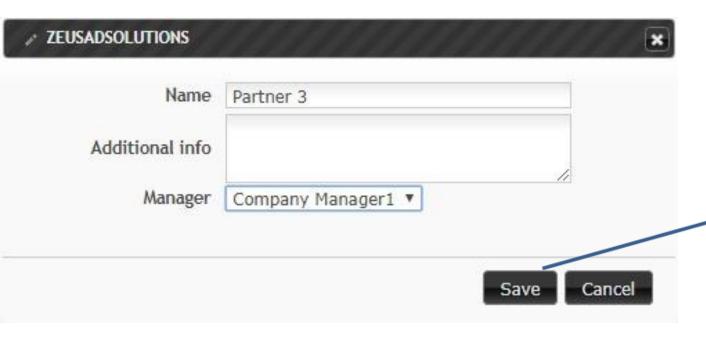

After filling details in form click on Save button to save partner details in database.

Difference between Users, Cards, Log Tab companies and My company tab:


- In the Users, Cards, and Log tabs, the Super Admin can grant permissions.
 - In My Company, the Company Manager can add partners.
- The Super Admin can allow a Company Manager to view Users, Cards, and Log details of selected sub-companies, which is useful for corporations where people visit multiple locations.
 - The My Company tab is designed for managing partner companies (e.g., cleaners, maintenance).

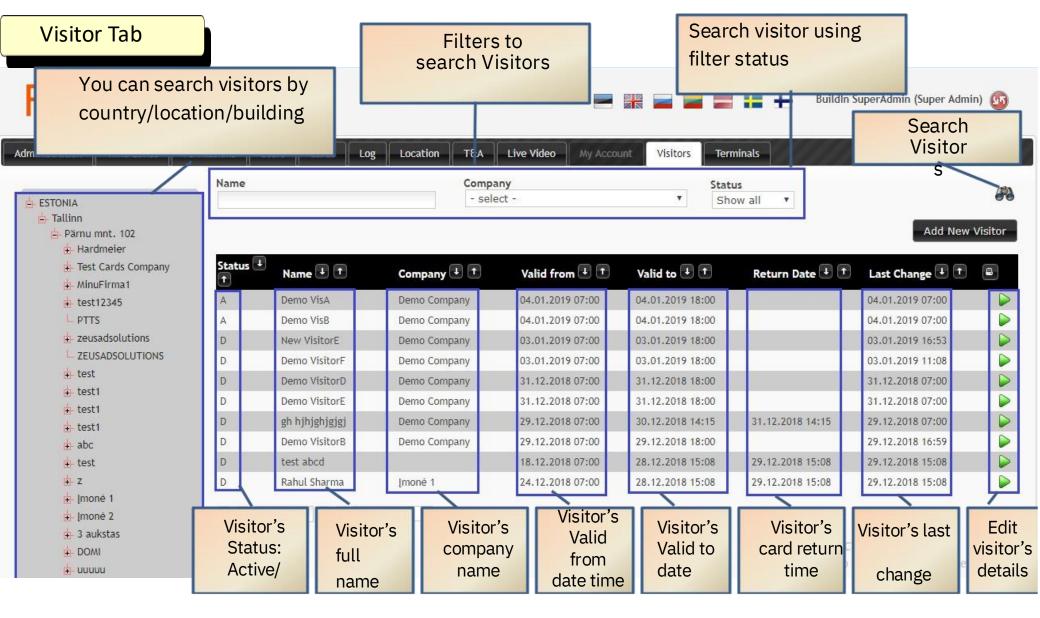

Visitor Tab: Add New Visitor


- In Add New Visitor, only the Personal Data/Personal tab is active during visitor creation;
 other tabs are disabled.
- A new visitor requires the following details: Company, First Name, Last Name, Phone(s), Email, Car Number, Car Type, Valid From, Valid To, Join Permission, and Card Need Return.
- Duplicate visitors with the same First Name, Last Name, Phone(s), and Email cannot be added.
 - After saving, other tabs become available.
 - Users can print the visitor card using the "Print Visitor Card" button.
 - Users can email the visitor card by clicking "Send QR Code".
 - If View Visitors (Read Only) is selected for a role, a read-only edit form will open.


Visitor tab: Add New Visitor/Personal data/Personal

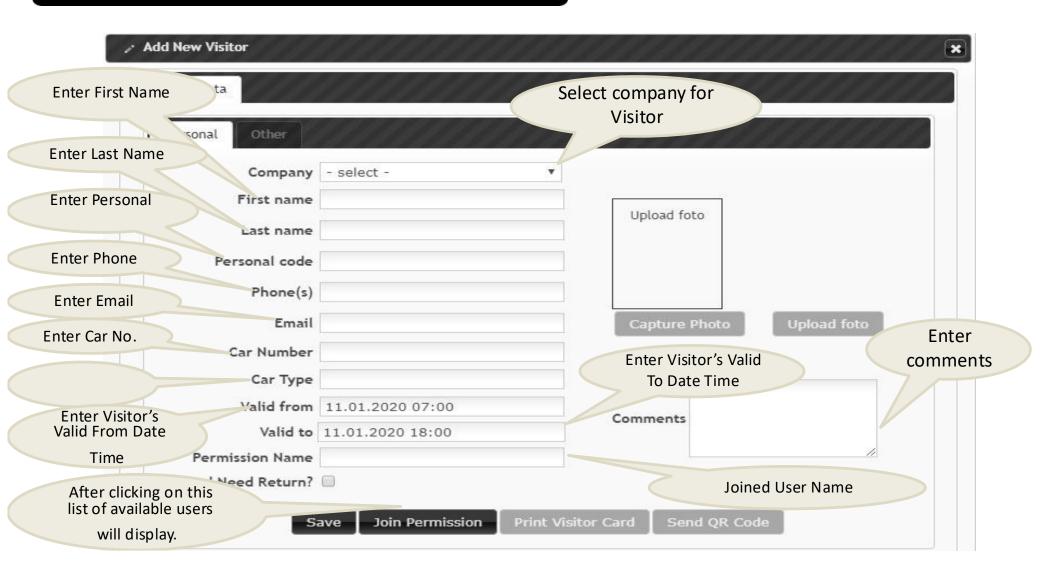

Visitor tab: Add New Visitor/ Personal data/ Personal


- Clicking "Join Permission" in the Personal Data/Personal tab shows a list of users with IsShortTermVisitorselected and Valid To > Current Date Time in the User tab.
- Only one user can be selected at a time.
- After selection, the permission name appears in the Personal Tab's Permission Name field.
- If the visitor's Valid To date has passed, the "Join Permission" button will be disabled.

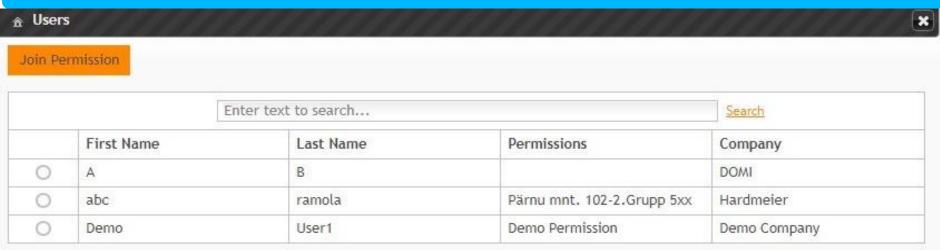

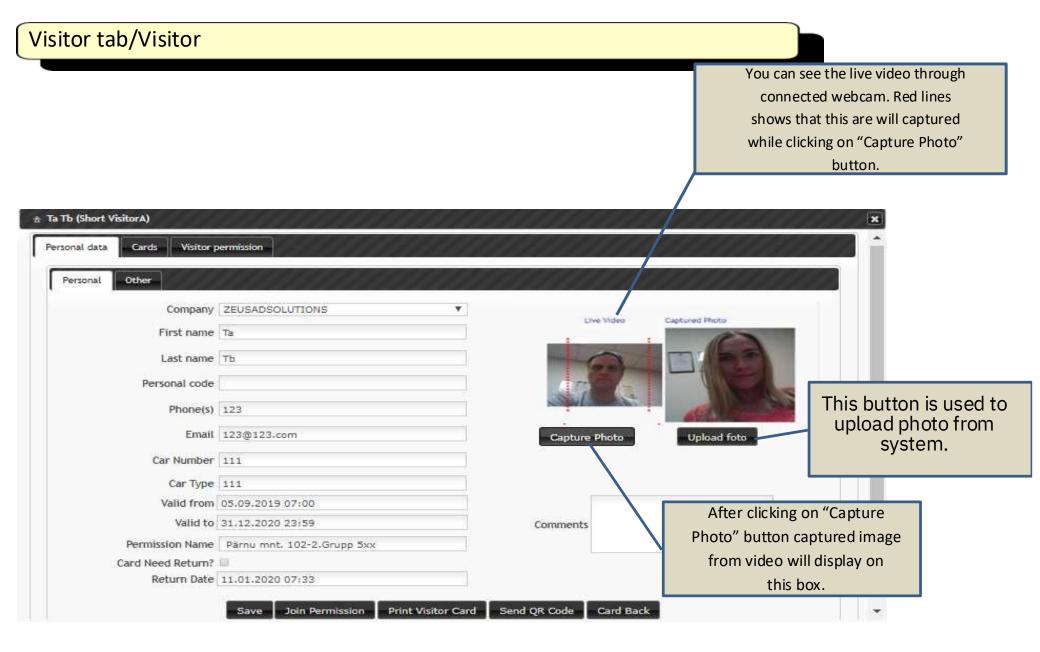

Visitor tab: Add New Visitor/ Personal data/ Other

- After clicking the Save button, the Personal Data/Other tab becomes active.
- Users can delete the selected visitor by clicking the "Delete" button in the
 Other tab.

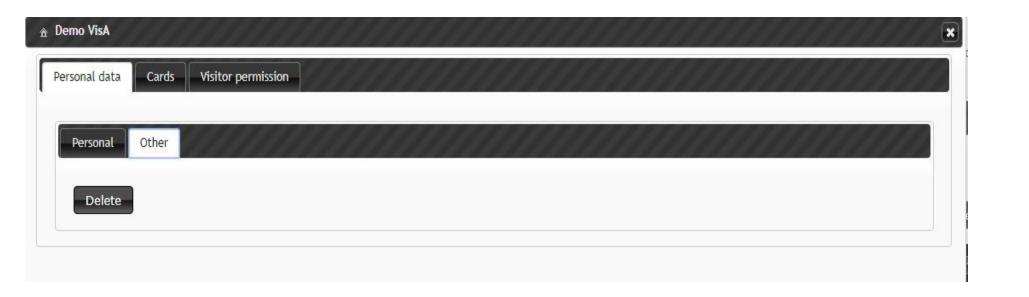

Visitor tab: Add New Visitor/ Cards

- Users can view the details of assigned cards for the selected visitor.
- If the visitor's Valid To date has passed, no visitor card will appear in the Card tab.




Visitor tab: Add New Visitor/Visitor Permission

- Users can view the details of permission and joined user name for the selected visitor.
- If the visitor's Valid To date has passed, no visitor permission will be displayed in the Visitor Permission tab.

| Personal data Cards | Visitor permission | | | |
|--|---------------------------------------|----------------------|---------------------------------------|---------------------------------------|
| Current user permission group name: Pärnu mnt. 102-6.Grupp 6 | | | Joined User Name: Visitor55 55 | |
| | Allow 1 | Allow 2 | Allow 3 | Allow 4 |
| Morning Shift | Mo Tu We Th Fr Sa Su 07:50 - 18:00 | Mo Tu We Th Fr Sa Su | Mo Tu We Th Fr Sa Su 07:50 - 18:00 | Mo Tu We Th Fr Sa Su 07:50 - 18:00 |


Visitor tab: Add New Visitor/ Print Visitor Card

- Users can print the visitor card by clicking the "Print Visitor Card" button.
- The button is only active if a Permission Name is selected for the visitor.
- If the visitor's Valid To date has passed, the "Print Visitor Card" button will be disabled in the Personal Data/Personal tab.

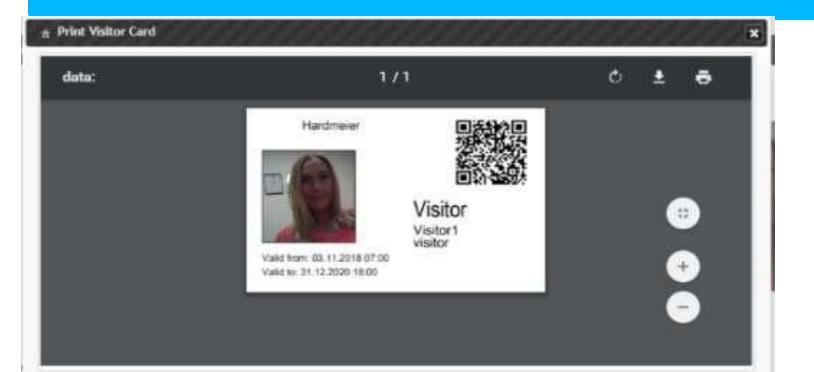


Visitor tab: Add New Visitor/ Send QR Code


- Users can send the visitor card to the visitor's email by clicking the "Send QR Code" button.
- The button is only active if both Permission Name and Email are entered for the visitor.
- After successfully sending the QR code, a confirmation message will appear. If there is an issue while sending, an error message will be displayed.
- If the visitor's Valid To date has passed, the "Send QR Code" button will be disabled in the Personal Data/Personaltab.

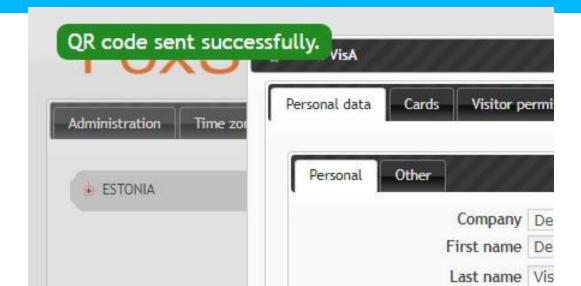


Visitor tab: Add New Visitor/ Card Back

- If the visitor has not returned the card yet, the "Card Back" button will be displayed.
- After clicking this button, the Return Date and Valid To Date (set to Return Date
 1) will be updated in the database.

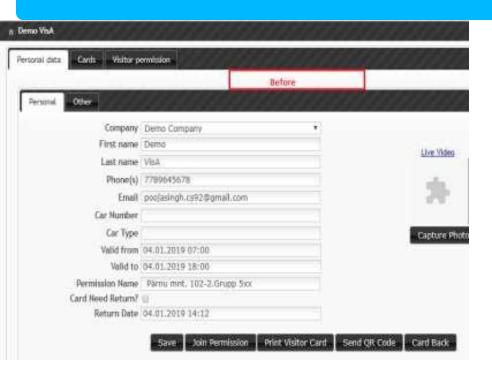

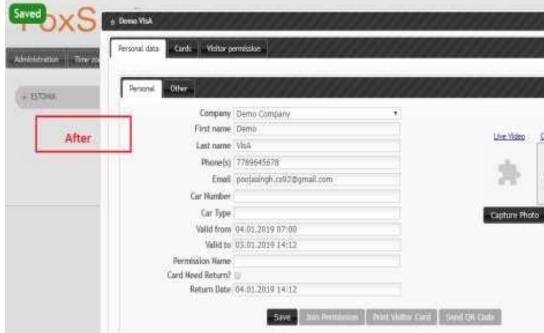

Visitor tab: Add New Visitor/ Card Back

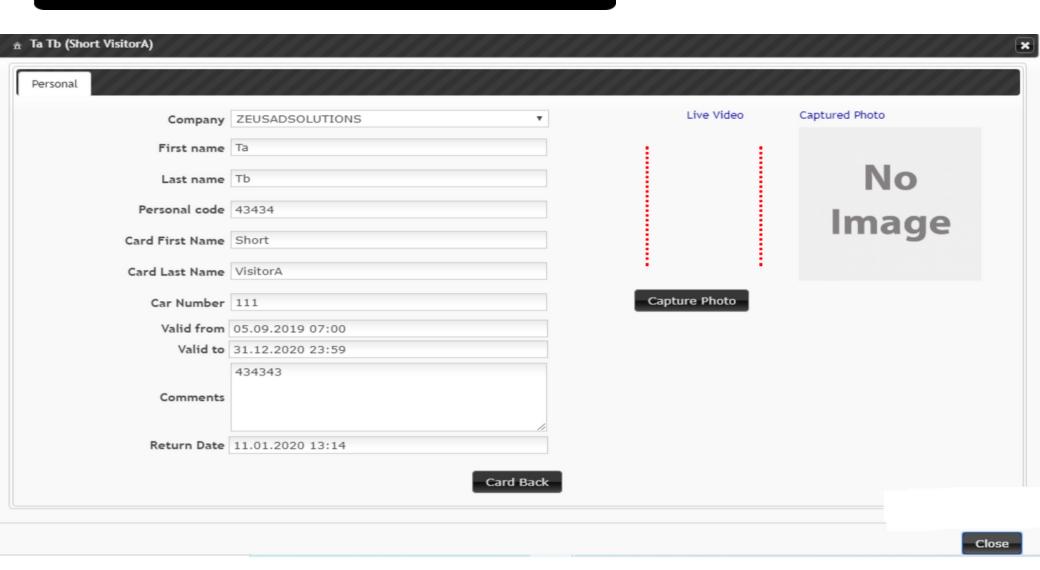


FAQ's


In Video Company Tab We can Assigned or Unassigned Camera to a Particular Company

☐ Shown as above picture

We Can assigned or Unassigned camera to Company using below picture

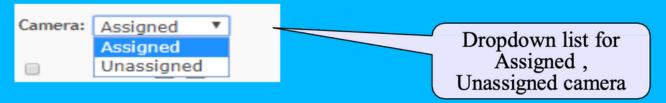

When we click check box you will see a button assigned or unassigned which you want to do

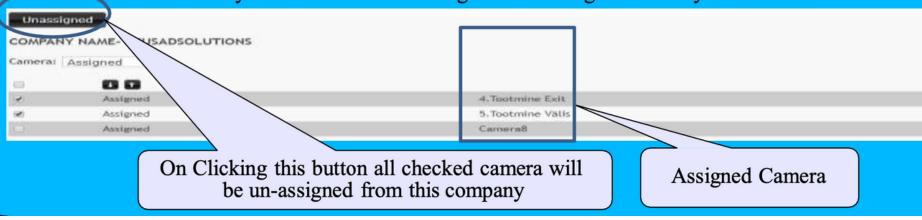



General safety

BASIC SAFETY REQUIREMENTS Before using this electrical device read all of the safety instructions and device manual and be sure you understand it clearly. Keep all of the documentation for further use and give it to the next user with the device. **Warning** Some of the FoxSec devices use mains power 230V/50Hz. **Start of operation** Before plugging in the device check to see that the rated mains voltage and mains

frequency, as stated on the rating label, match with your power supply.



Environmental protection

Worn out electrical devices contain considerable amounts of valuable raw and plastic materials, which can be recycled. Only for EU countries:



Newer dispose of electrical devices in your household waste! In accordance with European Guideline 2002/96/EC on used electronic and electric equipment and its implementation in national legal systems, used electrical devices must be collected separately and handed in for environmentally compatible recycling.



Safety precautions

NB! Save these instructions.

Warning: Read these instructions before use. Pay special attention to the safety information. These instructions are intended for persons having a basic technical knowledge of the operation of electrical devices such as the one described herein. If you have no experience whatsoever with such devices, we strongly recommend that you seek the advice of an experienced person. Installation and maintenance works can be done only by qualified personnel Check general requirements. Keep devices area tidy. Consider environmental conditions. Do not expose the machine to rain. Do not leave device in damp or wet environment. Do not use the device near inflammable liquids or gases. Risk of electric shock! Prevent body contact with earthed objects such as radiators, pipes, cooking stoves or refrigerators when operating with this device If the device is not in use store it in a cool dry place away of reach of children. Do not overload device. It will work safely and perfectly in stated limits. Do not use the mains cable for any purpose it is not intended for. Disconnect power before servicing. Disconnect power if it is not in use. Use only special installation box and cables for installing the device into outdoor conditions Be alert. Know what you are doing. Set out to work with reason. Do not operate device while under the influence of drugs, alcohol or medication! Before using the device check that it is not broken in any way. In case of discovering a defect on the device, let it check by authorized personnel only. All devices must be installed only places that have enough space to work normally. Use only those additional devices mentioned in this manual. If using other kind of additional devices, main device may not work properly or even broke the device. Let the device maintenance be done by authorized personnel only.

134

FoxSec WEB®

Limited Warranty

Hardmeier OÜ ("Hardmeier") warrants that the electronical component(s) sold by Hardmeier, or by either a distributor or stocking representative franchised by Hardmeier to sell electronical component(s) manufactured by Hardmeier (the "Electronical Component(s)"), are free from Manufacturing Defects (as defined and as determined below) for a period of one (1) year from the date of sale to the customer, subject to and on the terms and conditions set forth in this Limited Warranty. Hardmeier will remedy and correct any "Manufacturing Defects," with respect to the Electronical Component(s), during the one (1) year Limited Warranty period, by, at Hardmeier's sole option replacing, at Hardmeier's cost and expense, the Electronical Component(s) with the same or substantially-similar specifications, provided that (in addition to any other requirements or provisions of this Limited Warranty), the customer returns, with all shipping costs pre-paid at the customer's sole expense, the Electronical Component(s) that the customer claims are subject to any Manufacturing Defects according to Hardmeier's Returned Merchandise Authorization procedures, as they may exist from time-to-time. Hardmeier is the only party authorized to remedy and correct any Manufacturing Defects as provided by this Limited Warranty, and this Limited Warranty does not apply to replacements of Electronical Component(s), or any other corrective or remedial action with respect to the Electronical Component(s), made by any other party. **Definition of "Manufacturing Defects"** "Manufacturing Defects" means Hardmeier verified problems or defects resulting from the manufacture, materials, or workmanship of the Electronical Component(s) by Hardmeier that render(s) the Electronical Component(s) unable to function in a manner consistent with and according to the specifications provided by and/or defined by Hardmeier that are applicable to the Electronical Component(s). Furthermore, Hardmeier specifically reserves the right to: (a) determine, in its sole, absolute discretion, whether a "Manufacturing Defect(s)" exists; and (b) decline any claim under this Limited Warranty with respect to an Electronical component that Hardmeier can not verify, in its sole, absolute discretion, was sold to the Limited Warranty claimant either directly by Hardmeier or though a franchised Hardmeier distributor or stocking representative. Notwithstanding the foregoing, and without limiting the foregoing, "Manufacturing Defects" are NOT unconfirmed defects or problems caused by modifications to, or work performed on, the Electronical Components by any party after the sale of the Electronical Components by Hardmeier. In addition, "Manufacturing Defects" are NOT unconfirmed defects or problems caused by utilization of the Electronical Components in a manner inconsistent with the specifications provided and/or defined by Hardmeier that are applicable to the Electronical Component(s), or in any unreasonable manner. Hardmeier reserves the right to void this Limited Warranty, and shall not be obligated to make any replacements or credits of the Credit Amount with respect to the Electronical Component(s) in event that work is performed on the Electronical Component(s) by any party after the sale of the Electronic Components by Hardmeier, or if the Electronical Component(s) are used in a manner inconsistent with the specifications provided and/or defined by Hardmeier that are applicable to the Electronical Component(s), or are used in an unreasonable manner. EXCEPT AS SET FORTH IN THIS LIMITED WARRANTY, HARDMEIER MAKES NO OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED. FURTHERMORE, HARDMEIER SHALL NOT BE LIABLE FOR ANY DAMAGES (WHETHER CONSEQUENTIAL, INCIDENTAL OR OTHERWISE) FOR ANY BREACH OF THIS LIMITED WARRANTY, EXCEPT FOR HARDMEIER OBLIGATIONS TO REPLACE THE ELECTRONICAL COMPONENT(S), AS ELECTED BY HARDMEIER AT HARDMEIER SOLE OPTION, AND AS MORE PARTICULARLY PROVIDED BY THIS LIMITED WARRANTY, AND SUCH REPLACEMENTS, AS THE CASE MAY BE, SHALL BE THE SOLE REMEDY FOR ANY SUCH BREACH BY HARDMEIER OF THIS LIMITED WARRANTY.